








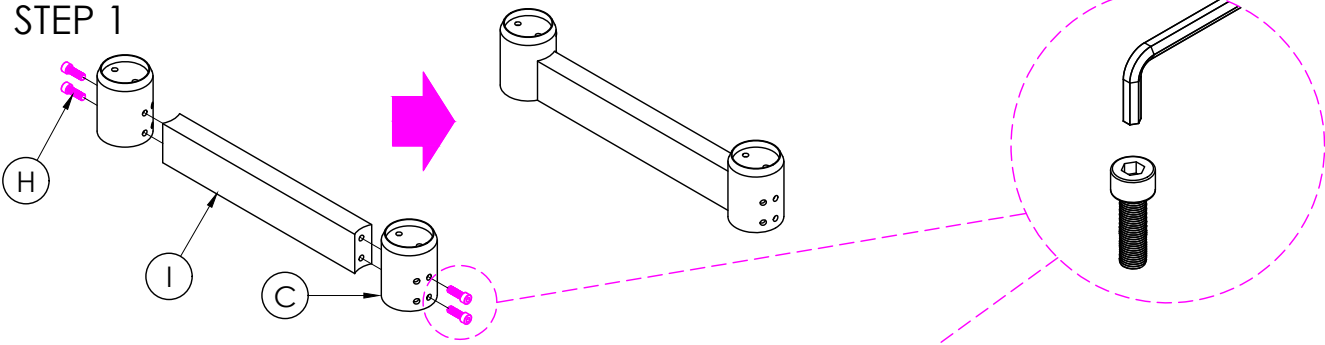
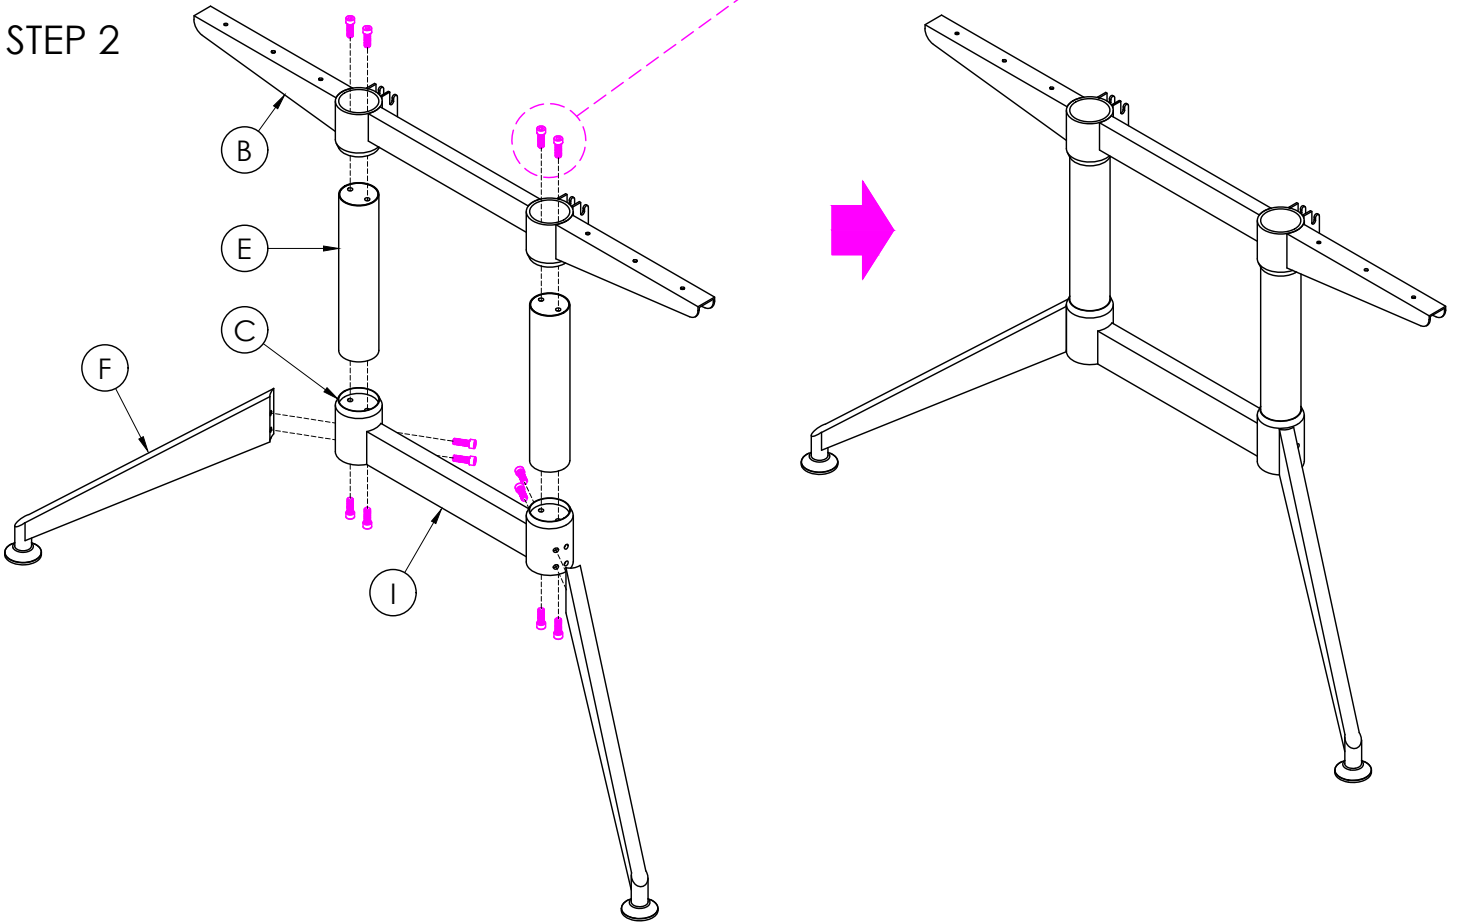


A		1x	B		2x	C		2x
D		2x	E		4x	F		4x
G		2x	H		36x	I		2x


STEP 1




STEP 2



STEP 3

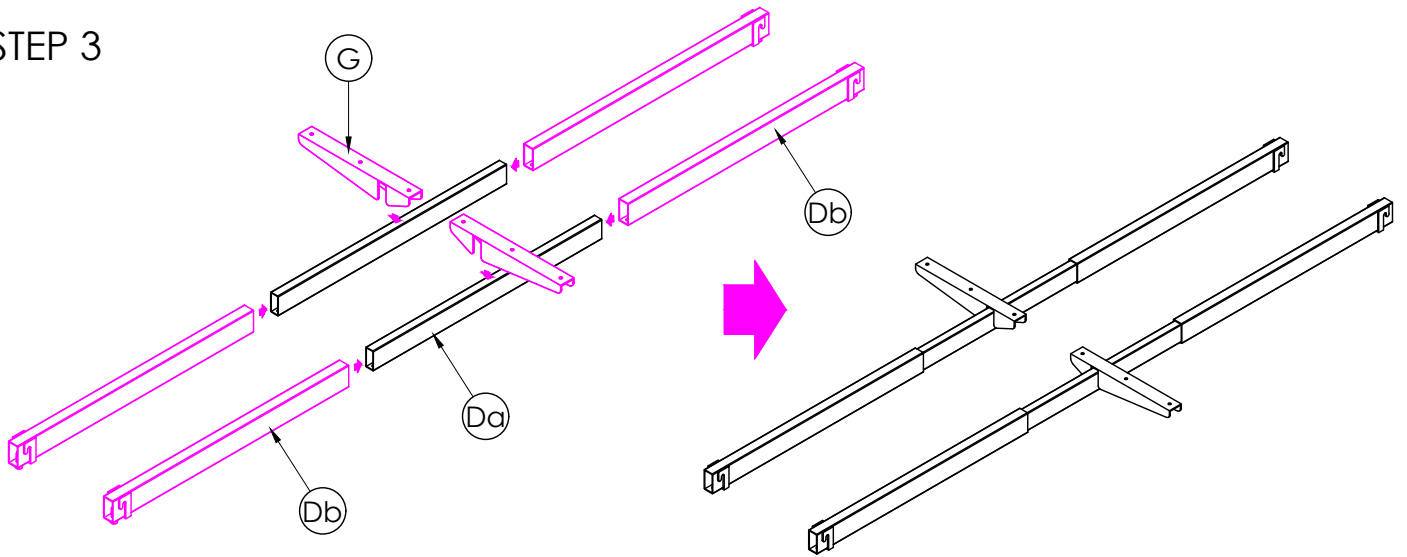

STEP 4

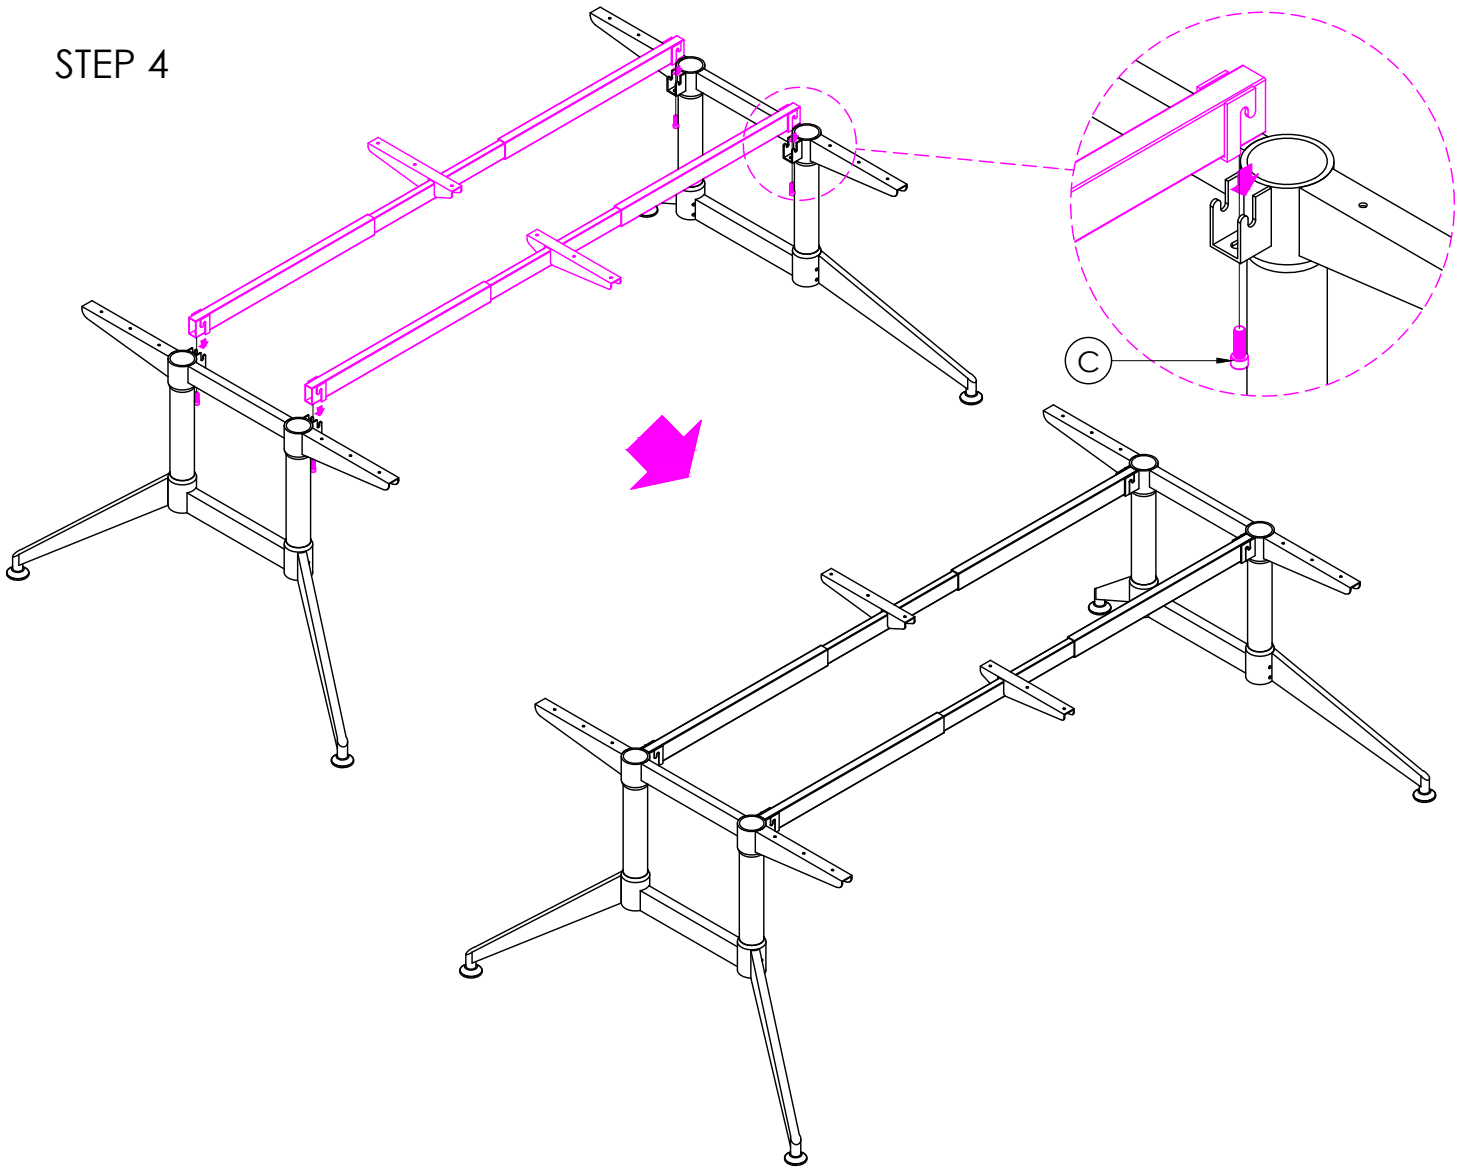

J



8x


K





WOOD SCREW M6x25

18x

STEP 5

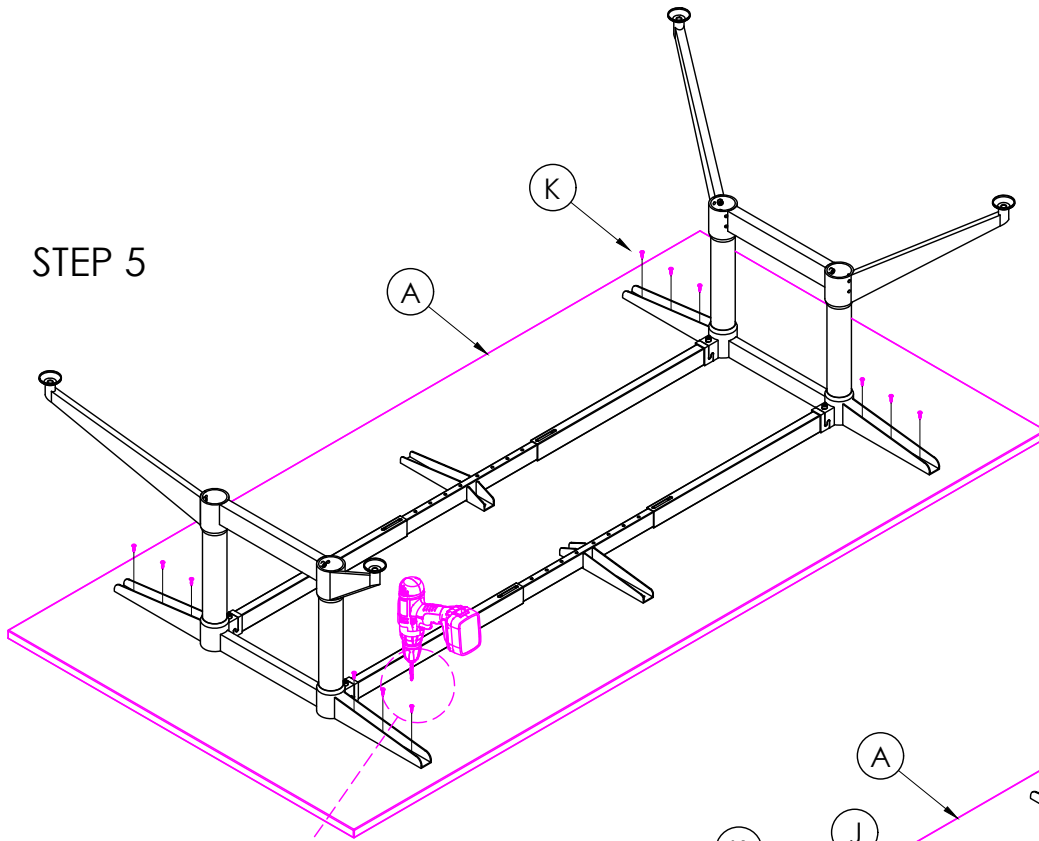


STEP 6

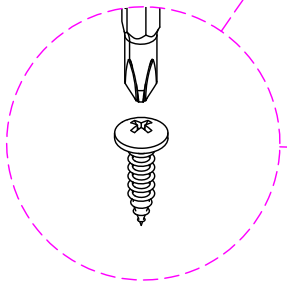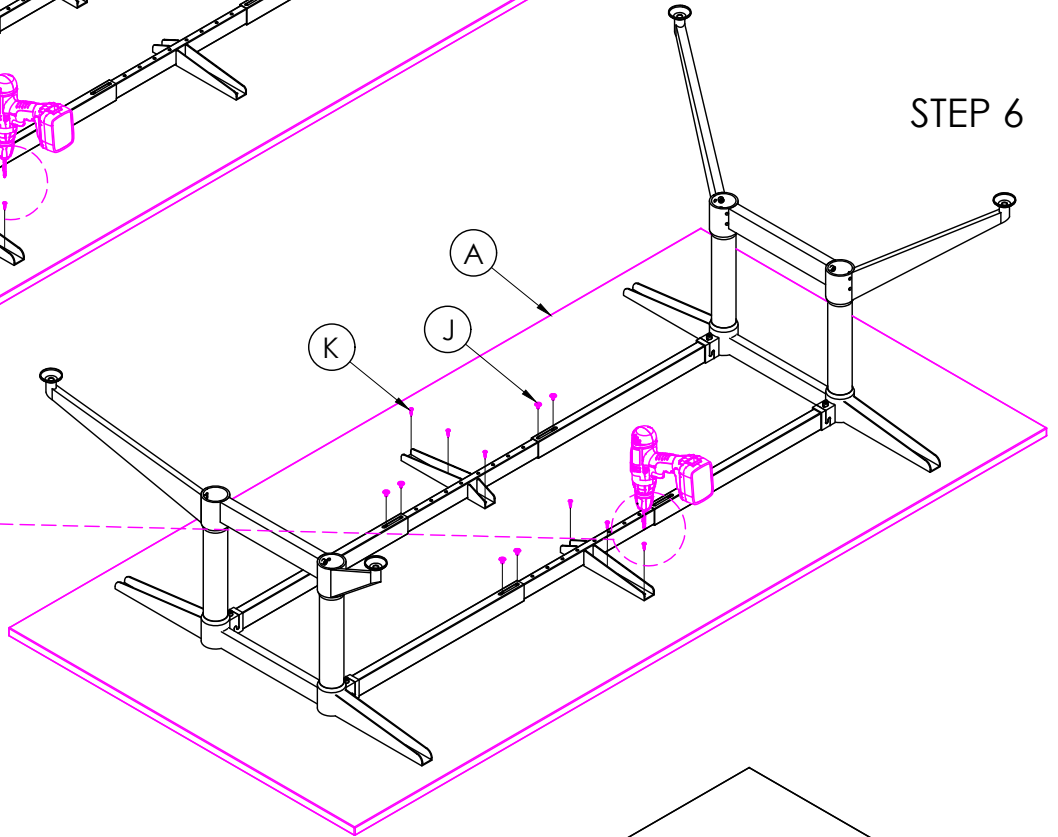

CAUTION:
HEAVY



2 PERSON HEAVY
ASSEMBLY

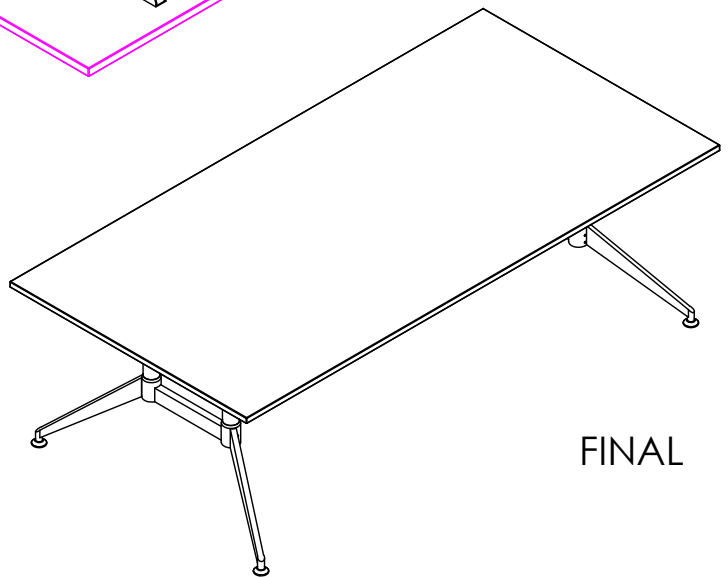

FINAL