






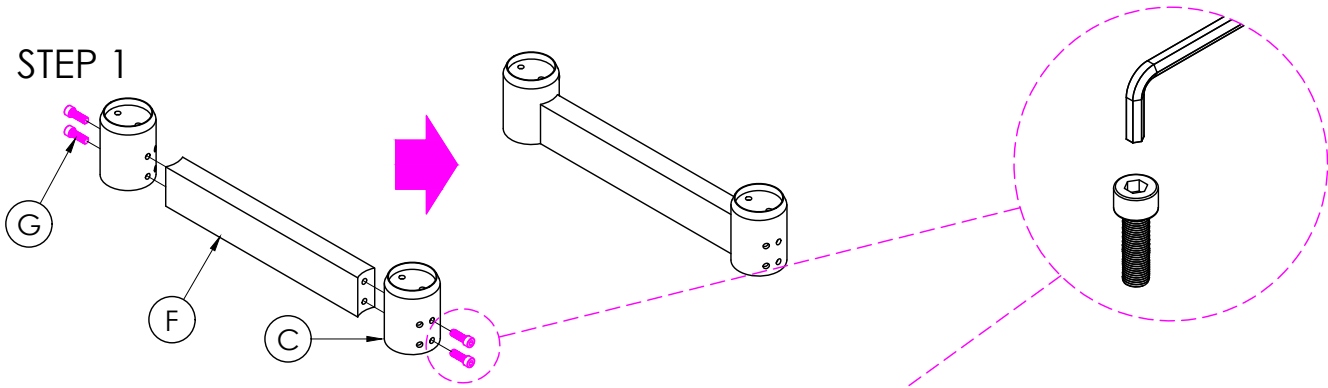
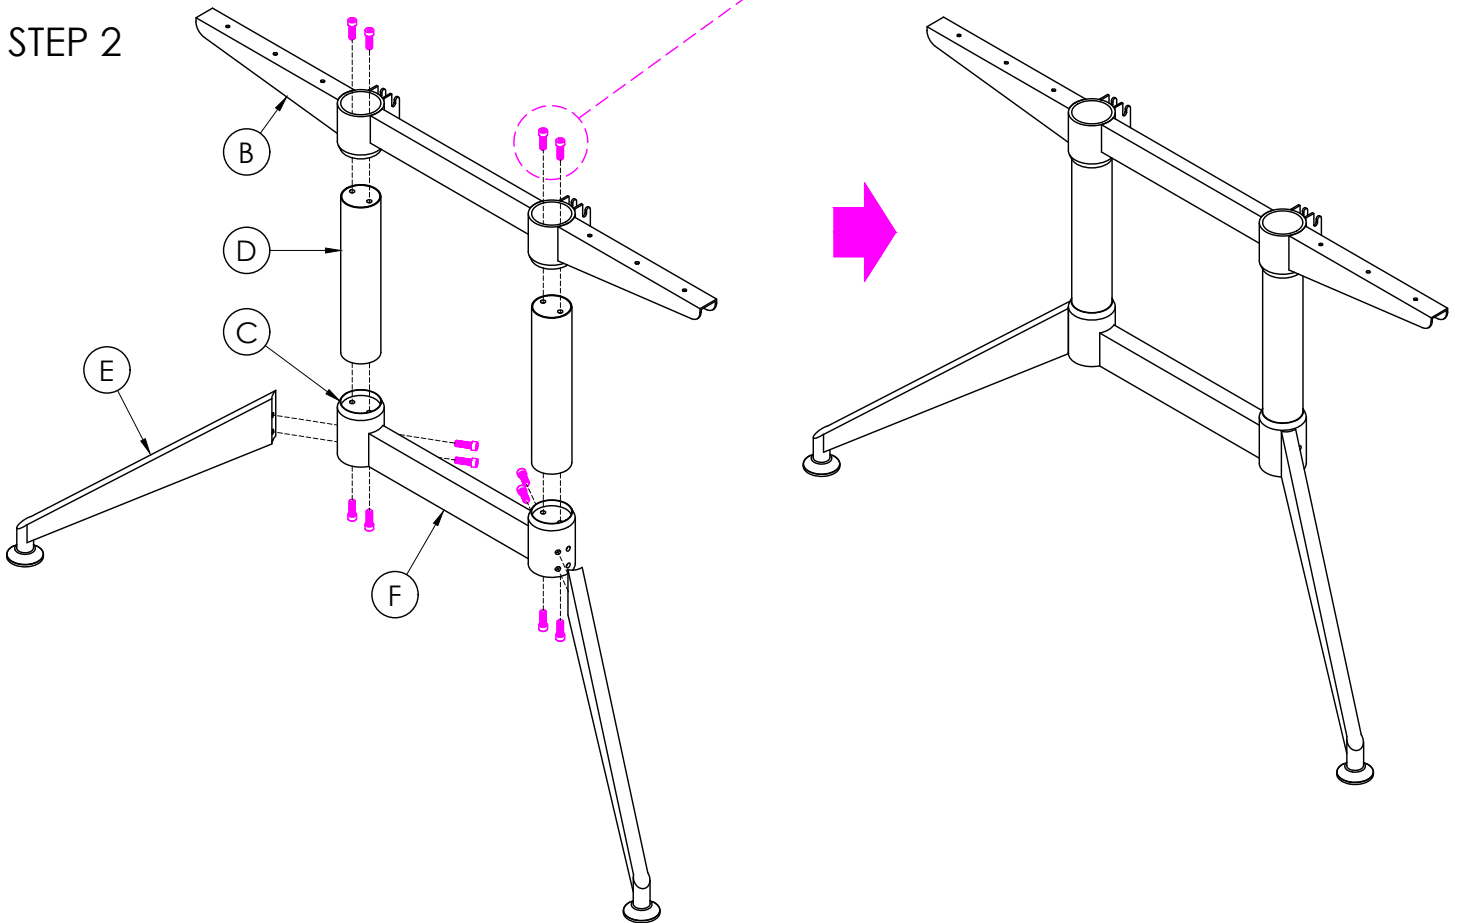






A		2x	B		2x	C		4x
D		6x	E		4x	F		2x
G	 M6x25	40x						

STEP 1




STEP 2




H		1x	I		1x	J		4x
K		4x						


STEP 3

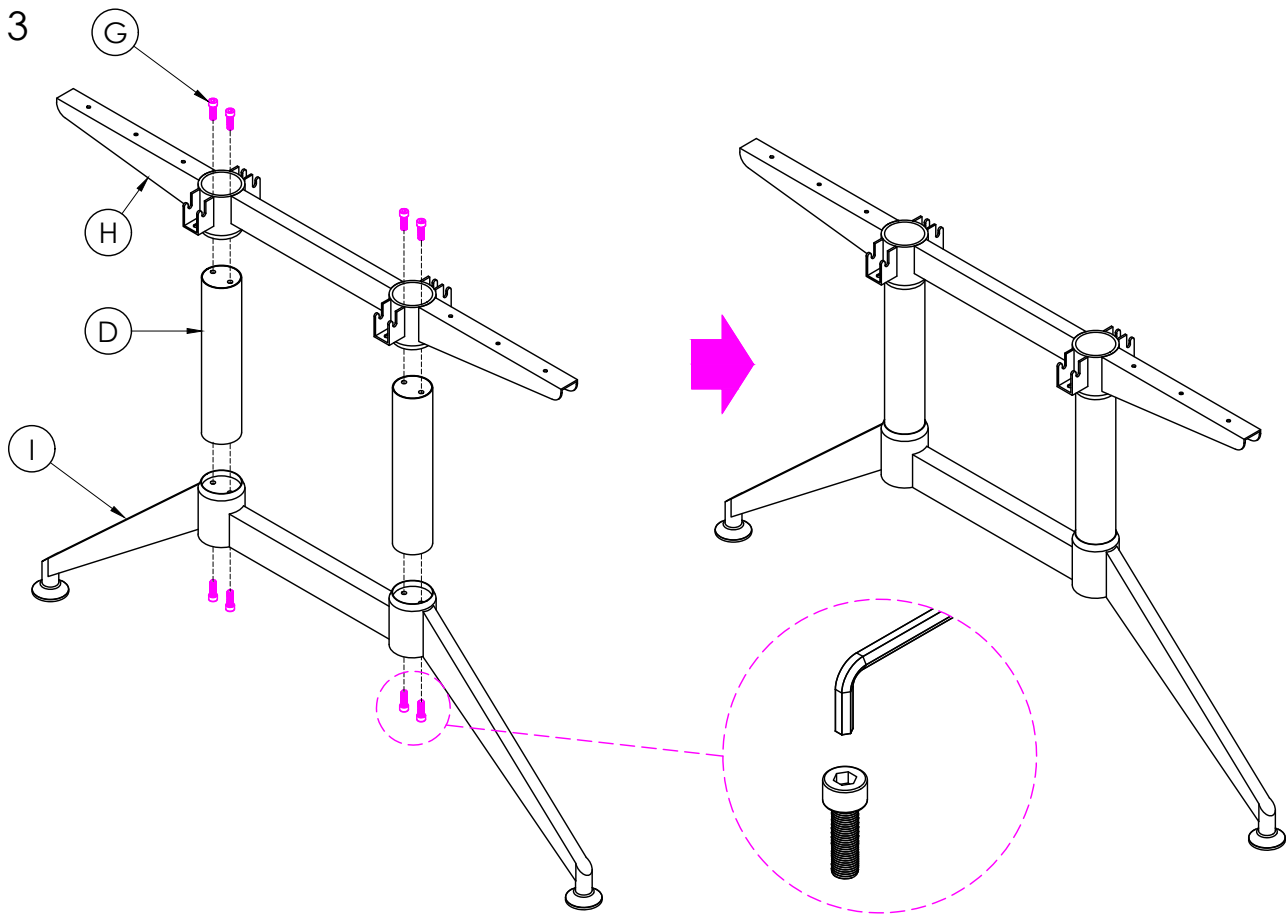

STEP 4

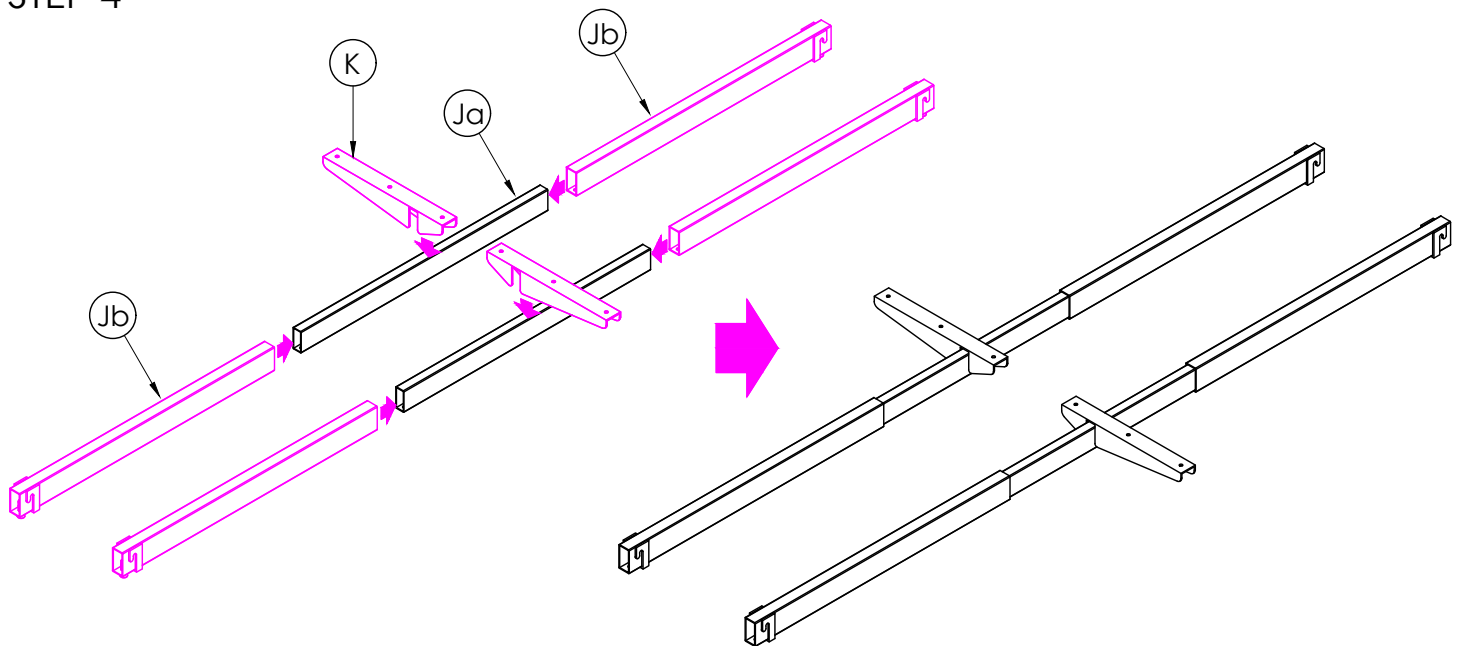

STEP 5

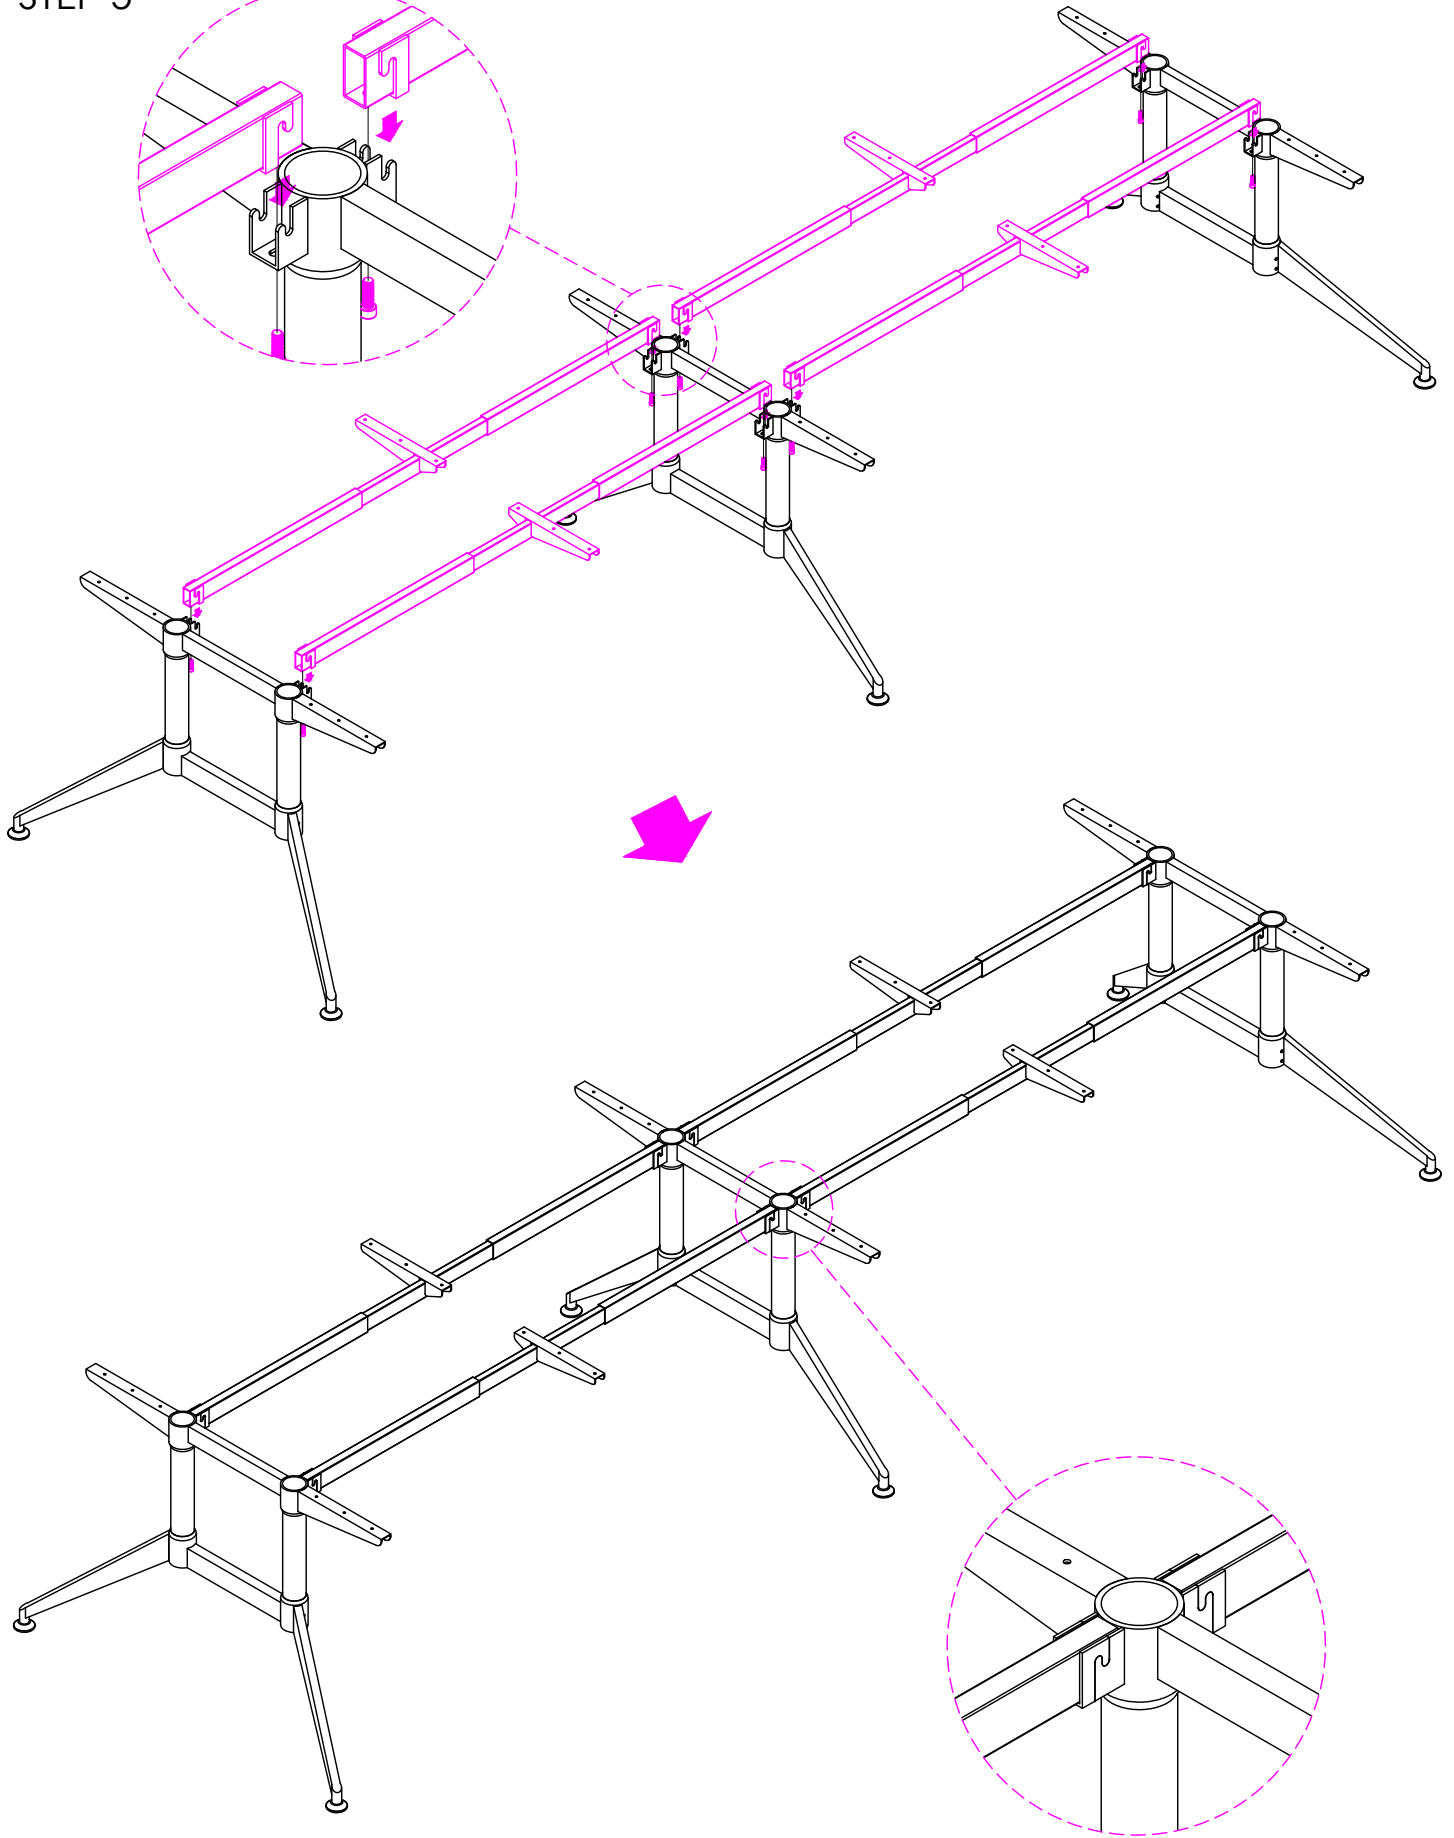

L



-


M




WOOD SCREW M6x25

18x

STEP 6

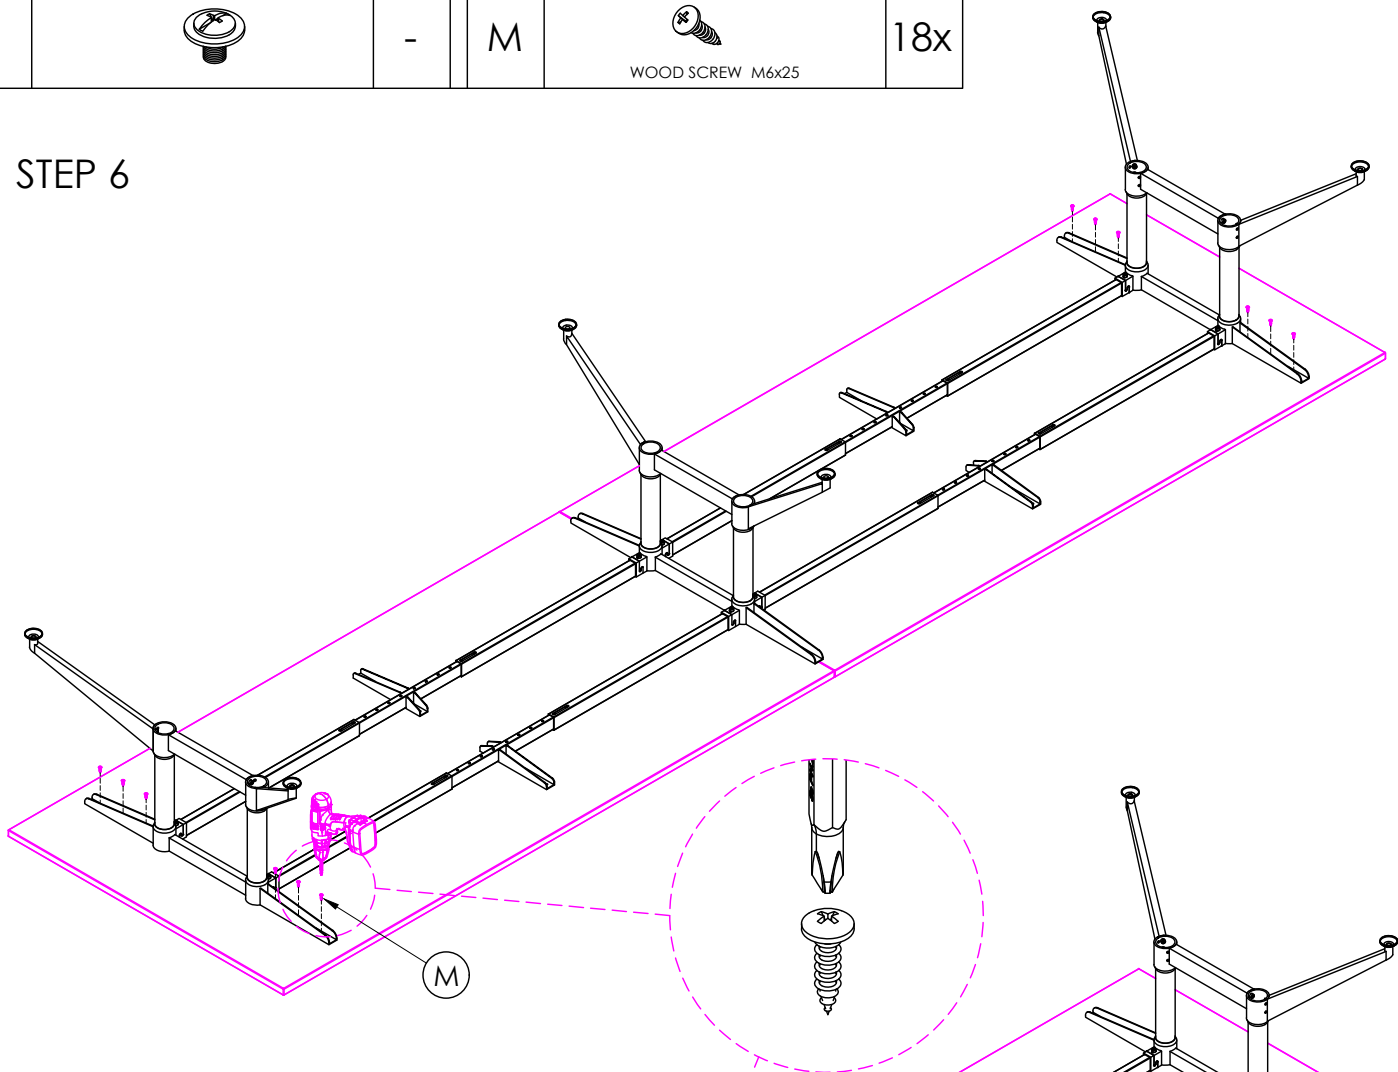

STEP 7

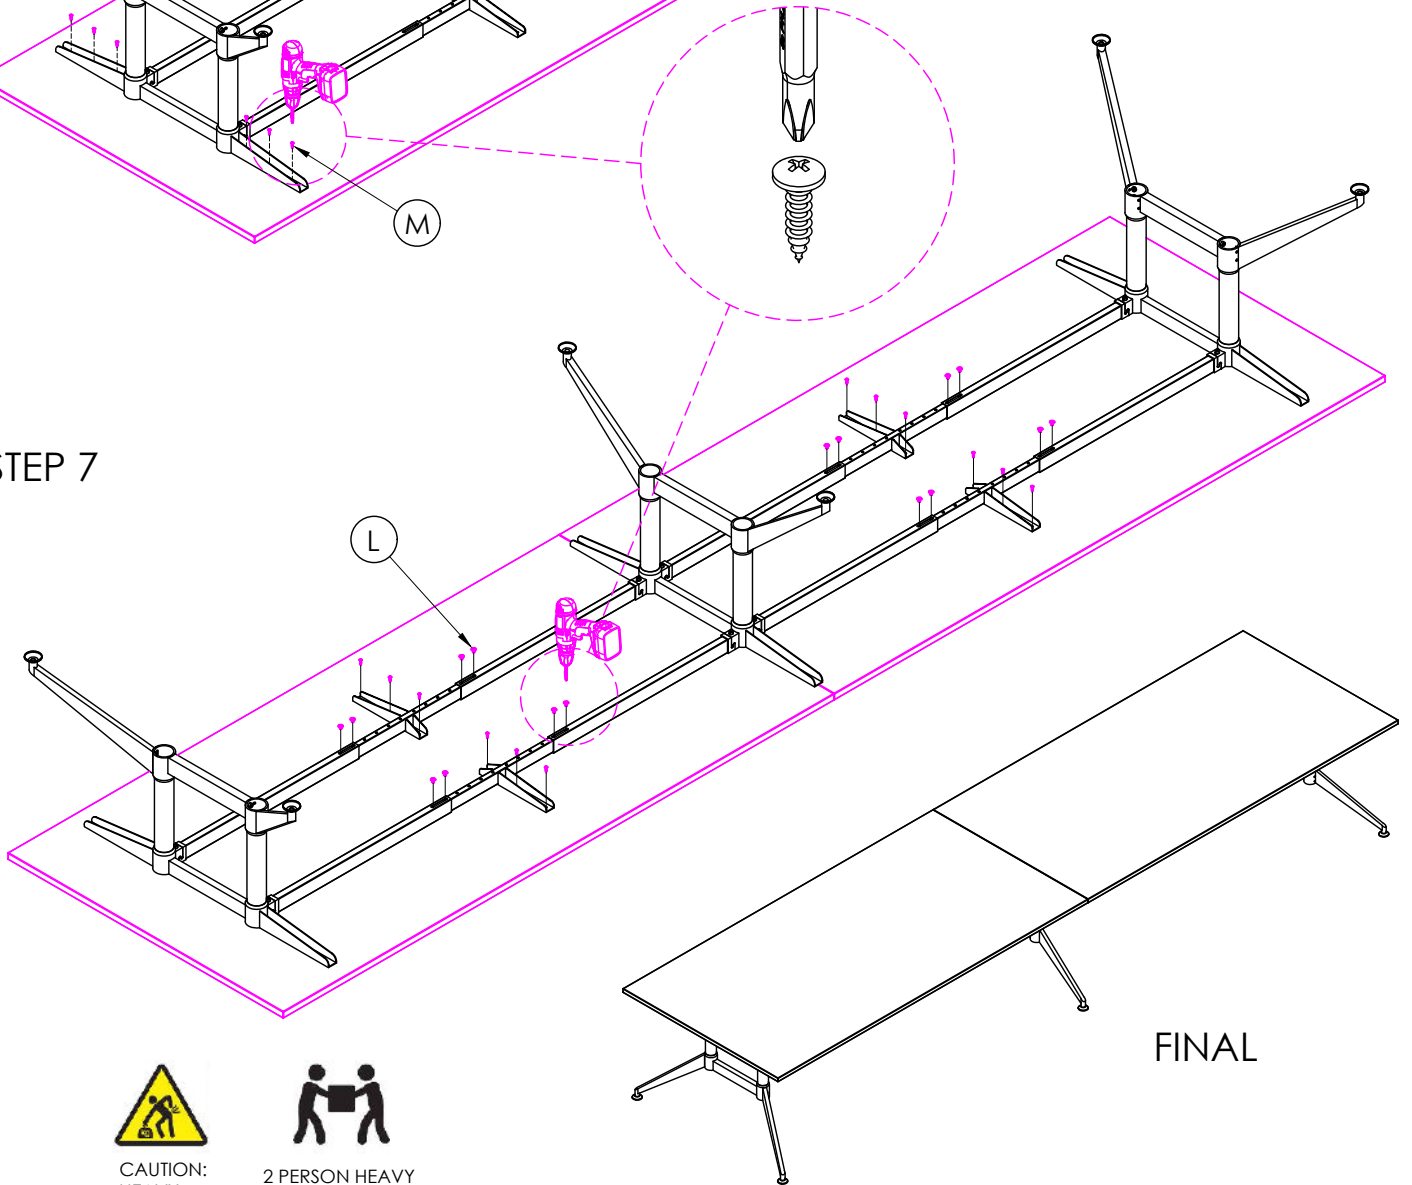

CAUTION:
HEAVY



2 PERSON HEAVY
ASSEMBLY

FINAL

