

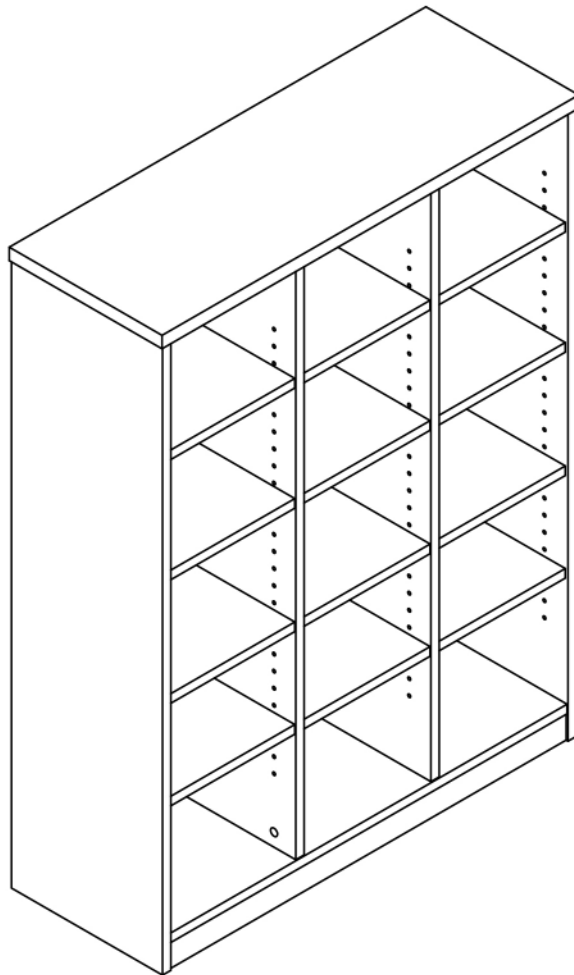
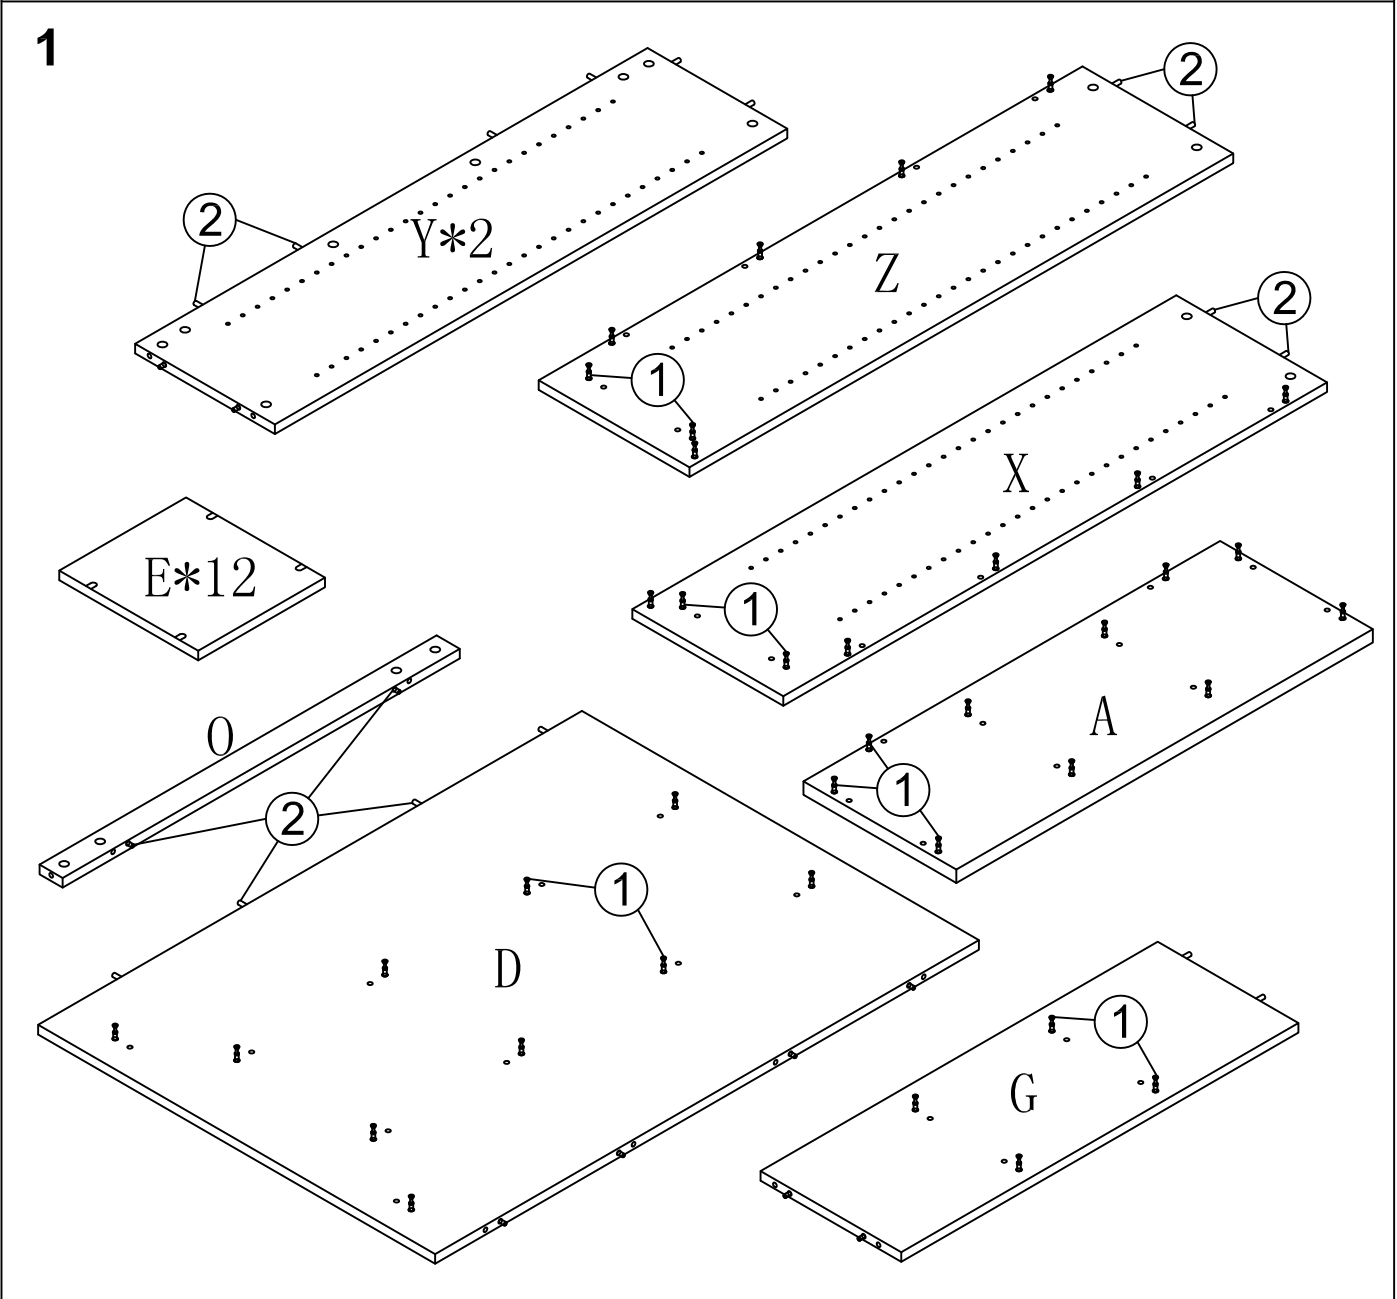
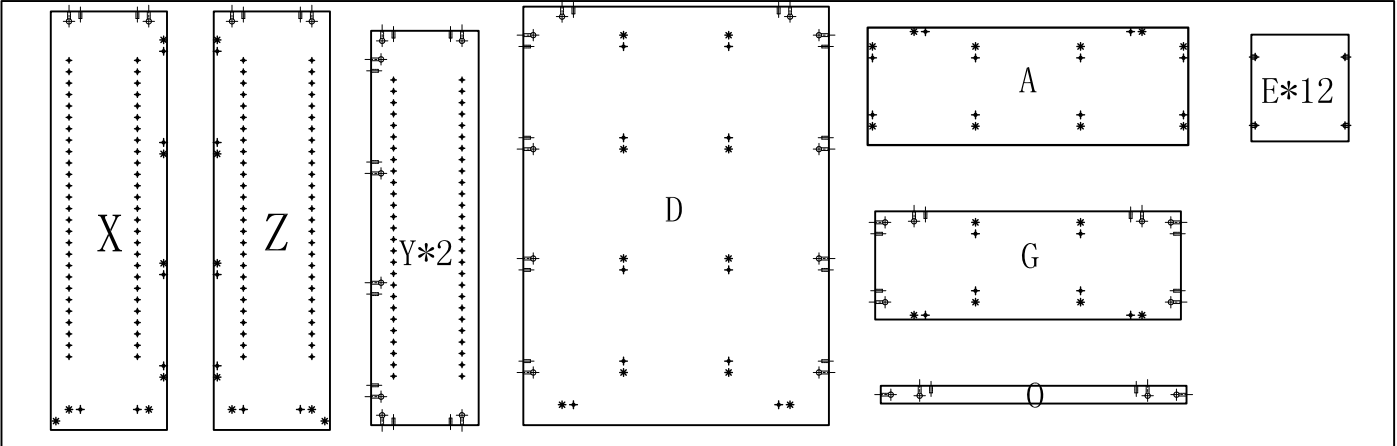
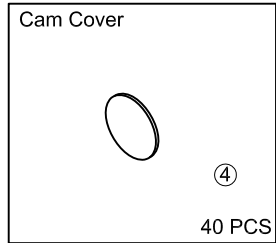
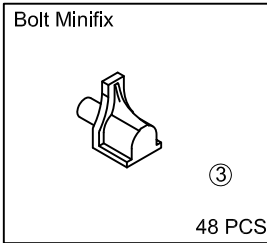



READY2GO

**ASSEMBLY INSTRUCTIONS
R20-PH12**

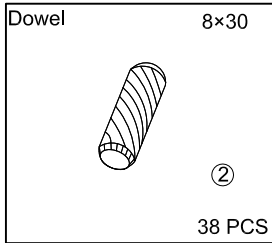


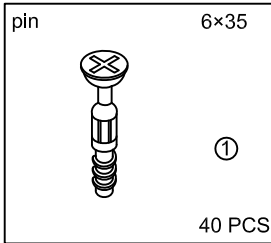


2

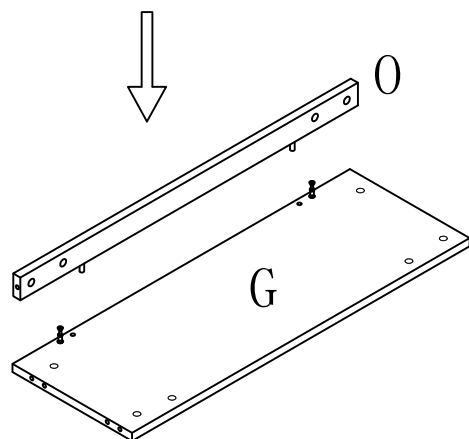


3

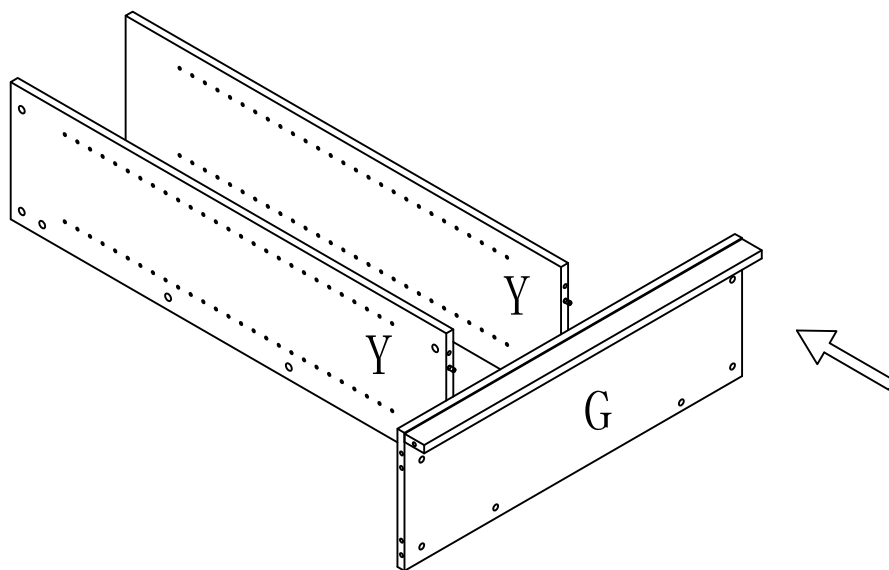


4

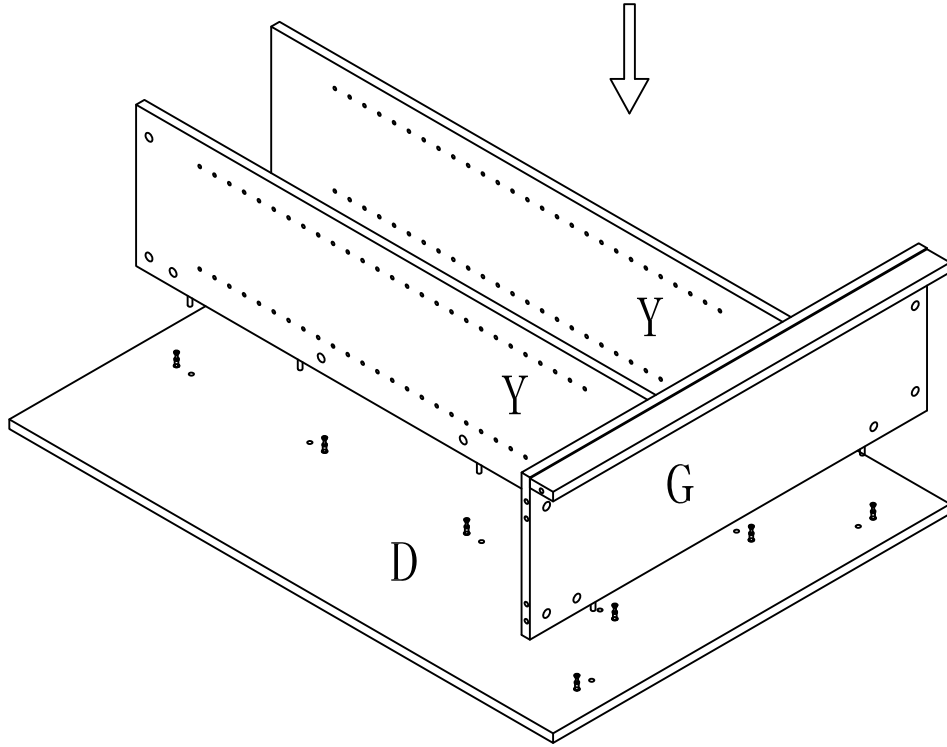


5

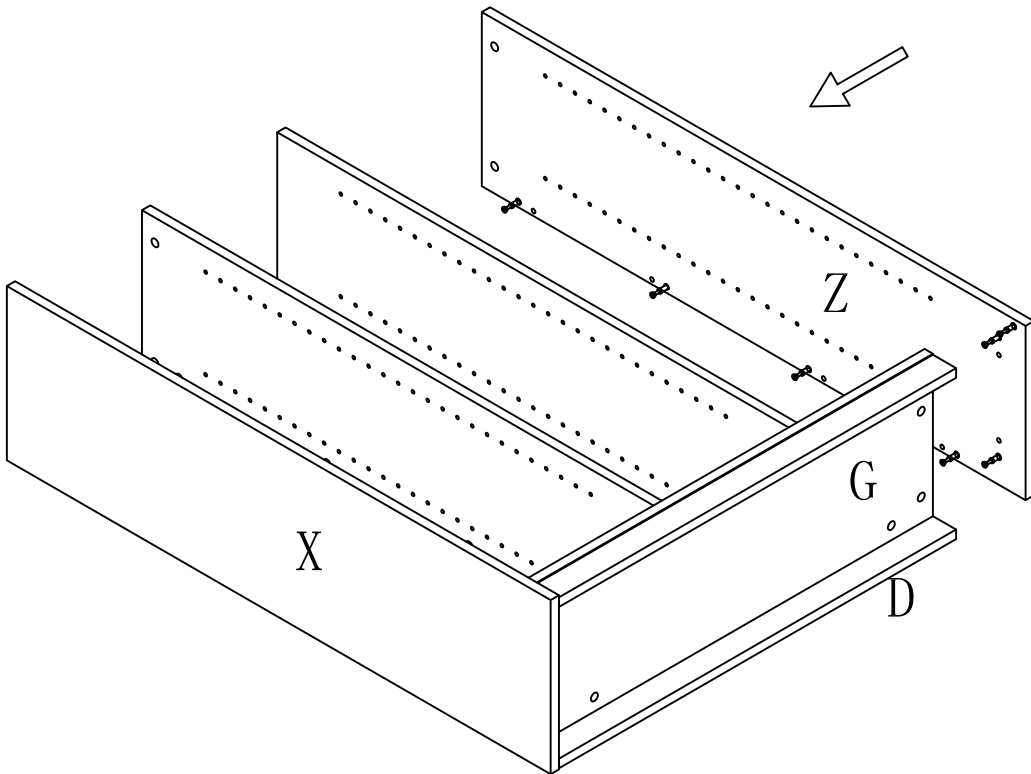

6

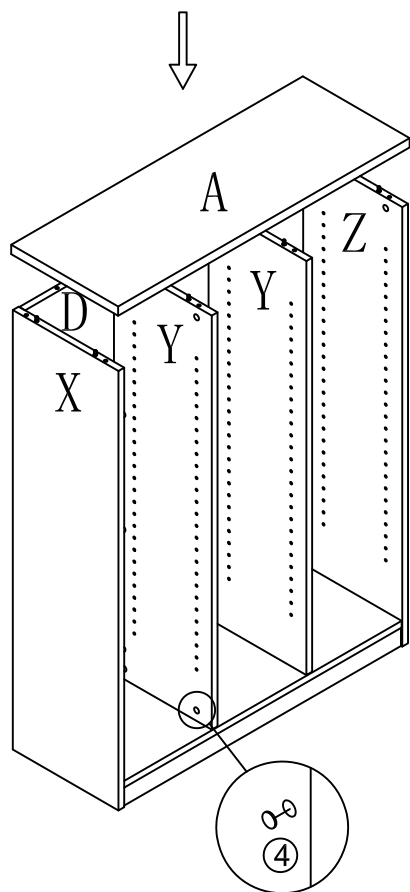



7

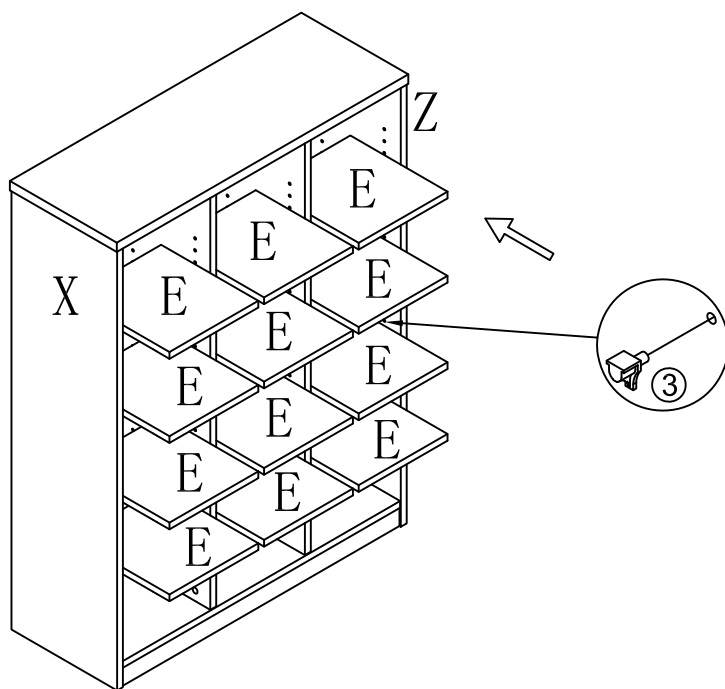



READY2GO

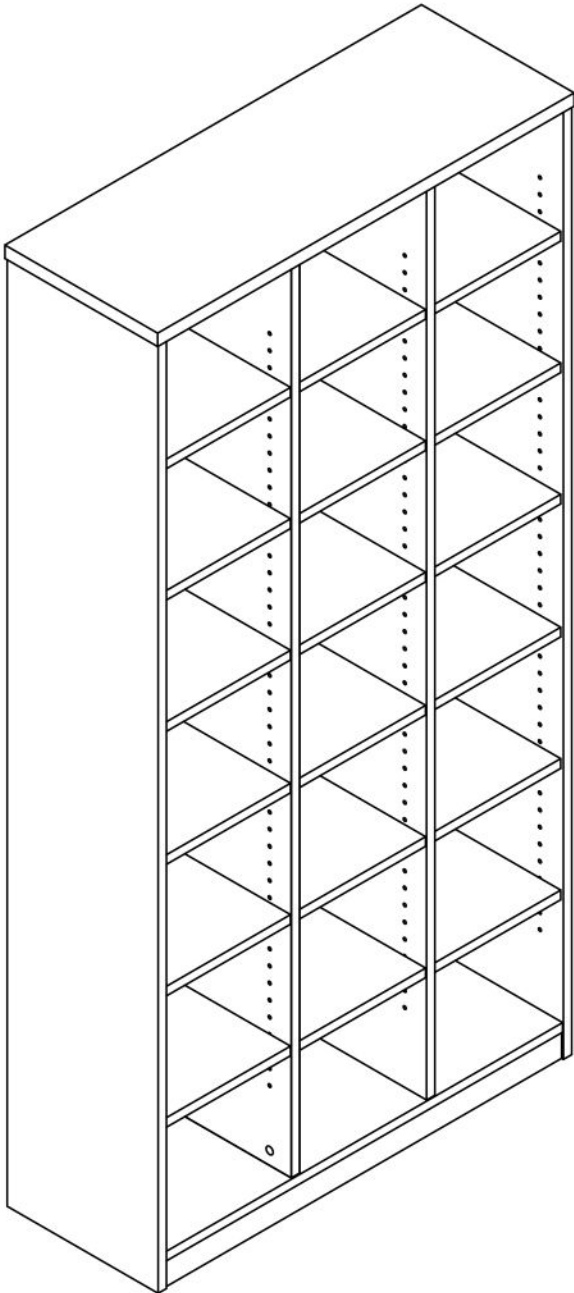
**ASSEMBLY INSTRUCTIONS
R20-PH18**





pin 6x35

 ①
 40 PCS


Dowel 8x30

 ②
 38 PCS

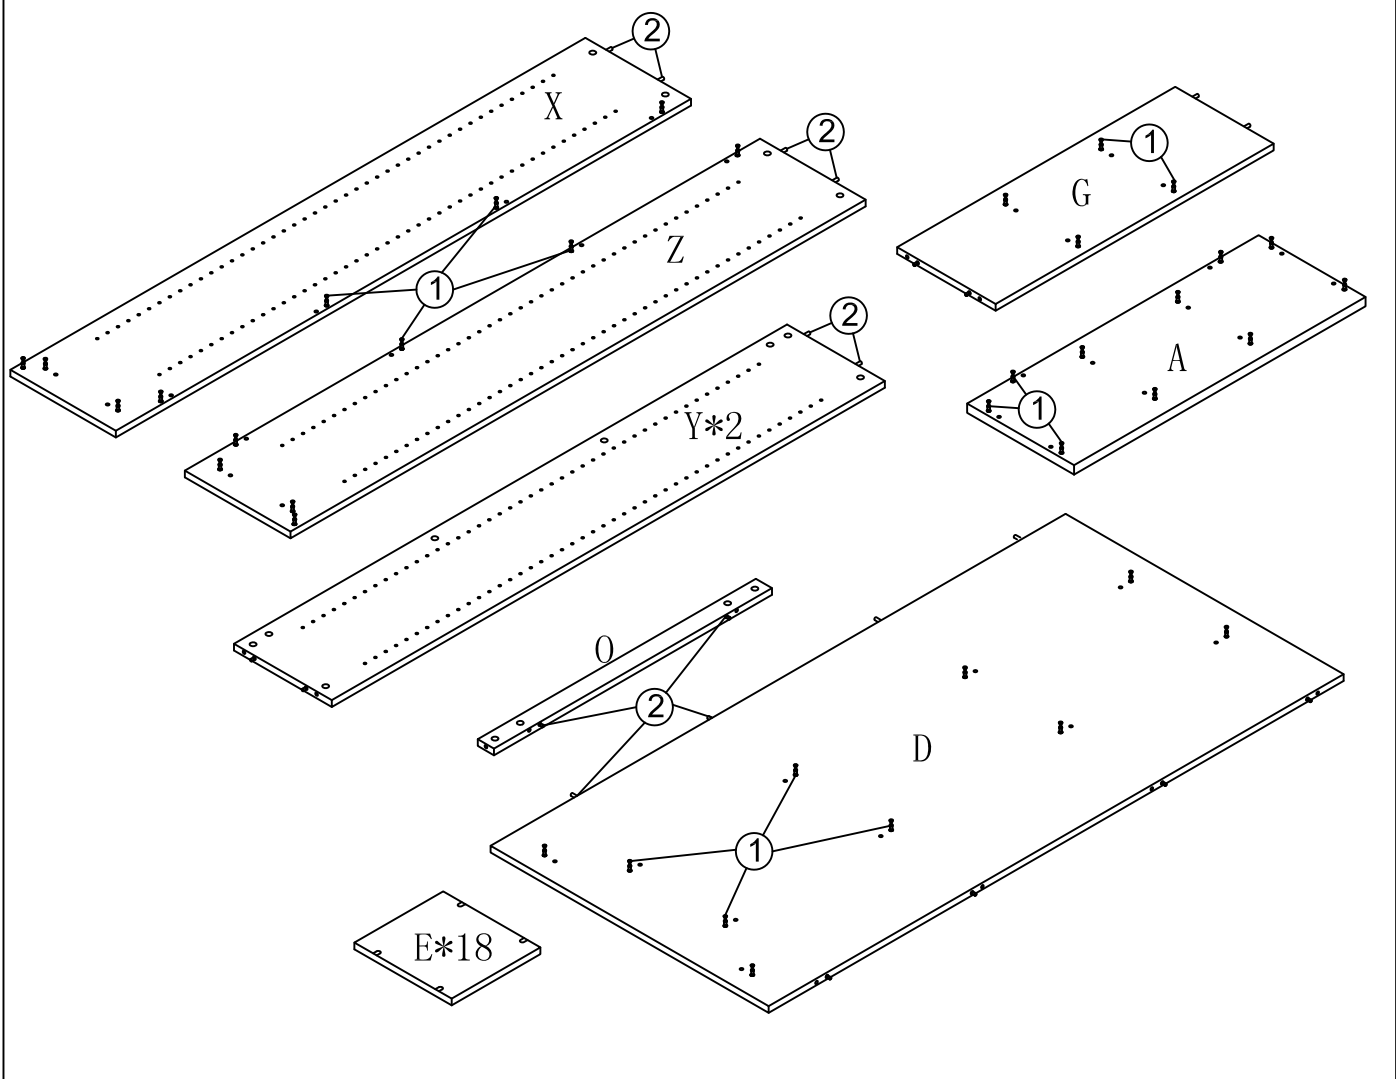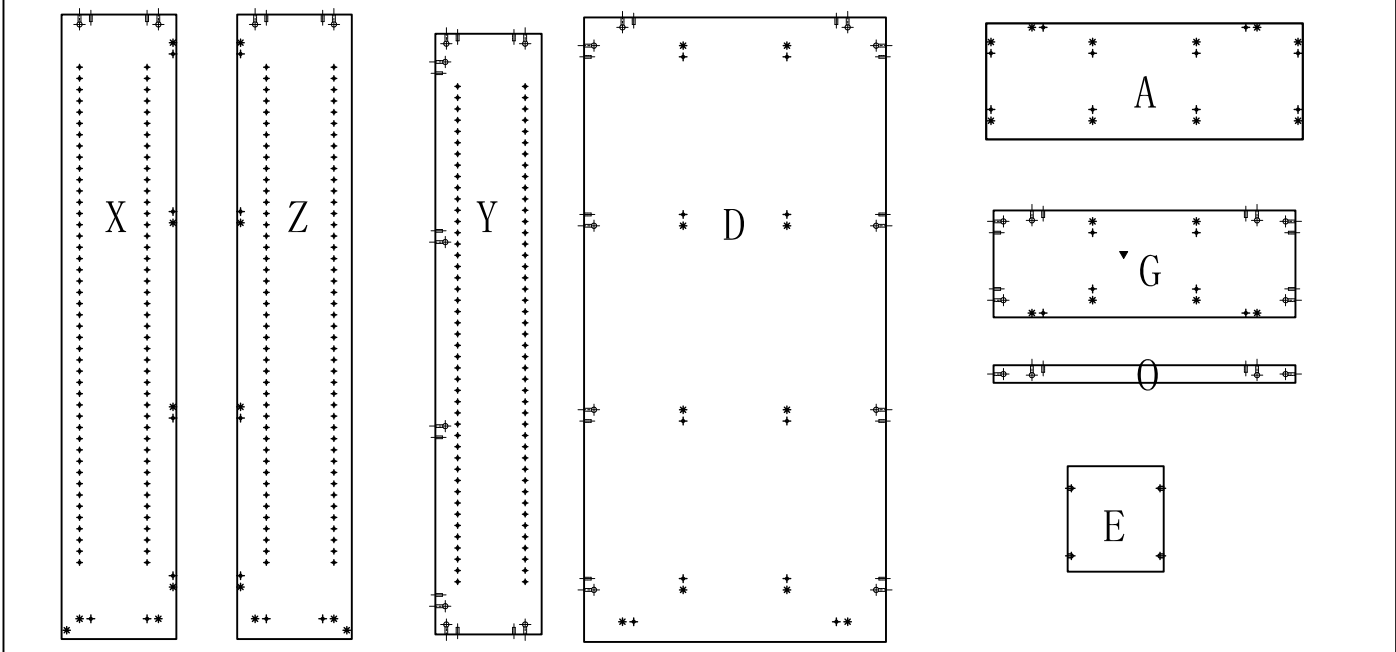Bolt Minifix

 ③
 72 PCS


Cam Cover

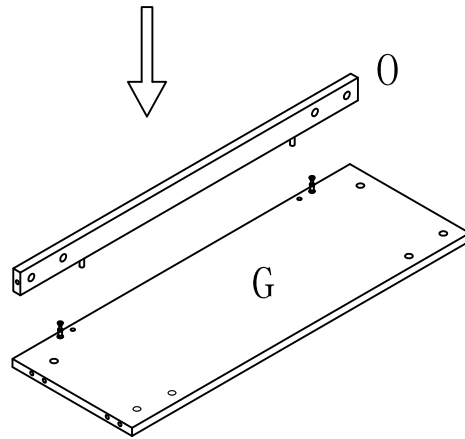 ④
 40 PCS




2

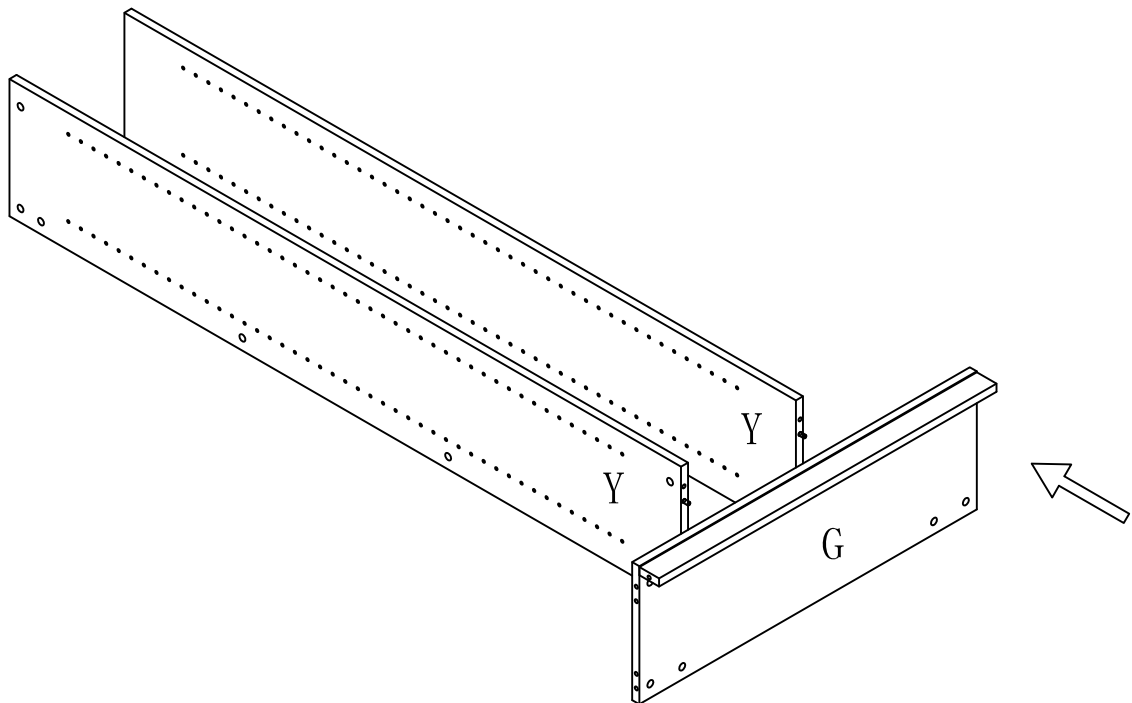


3




4

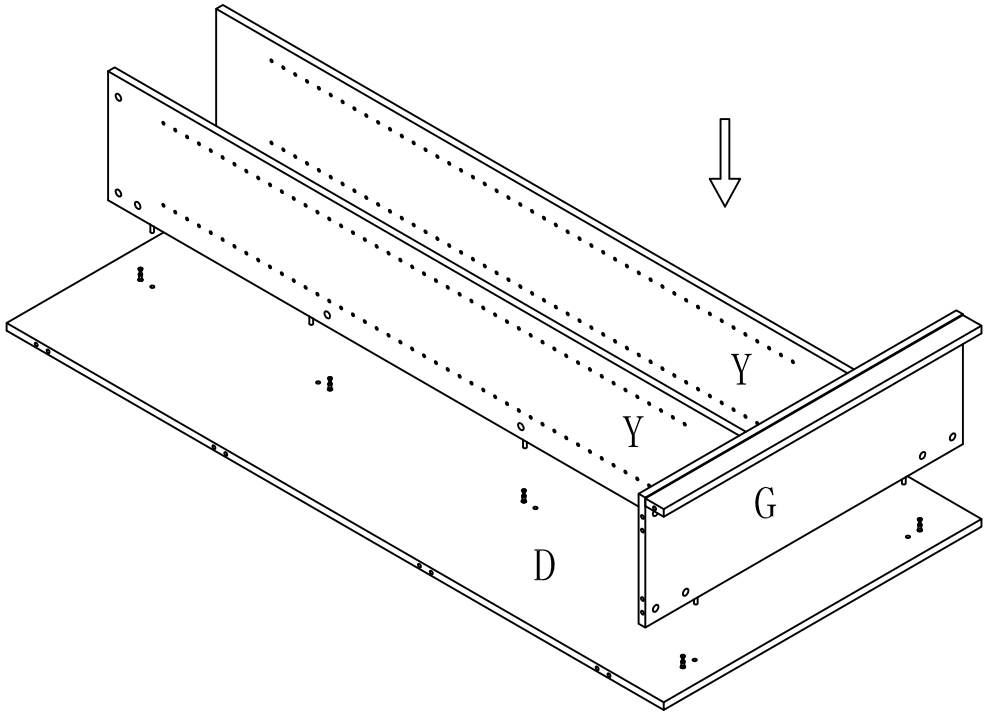

5

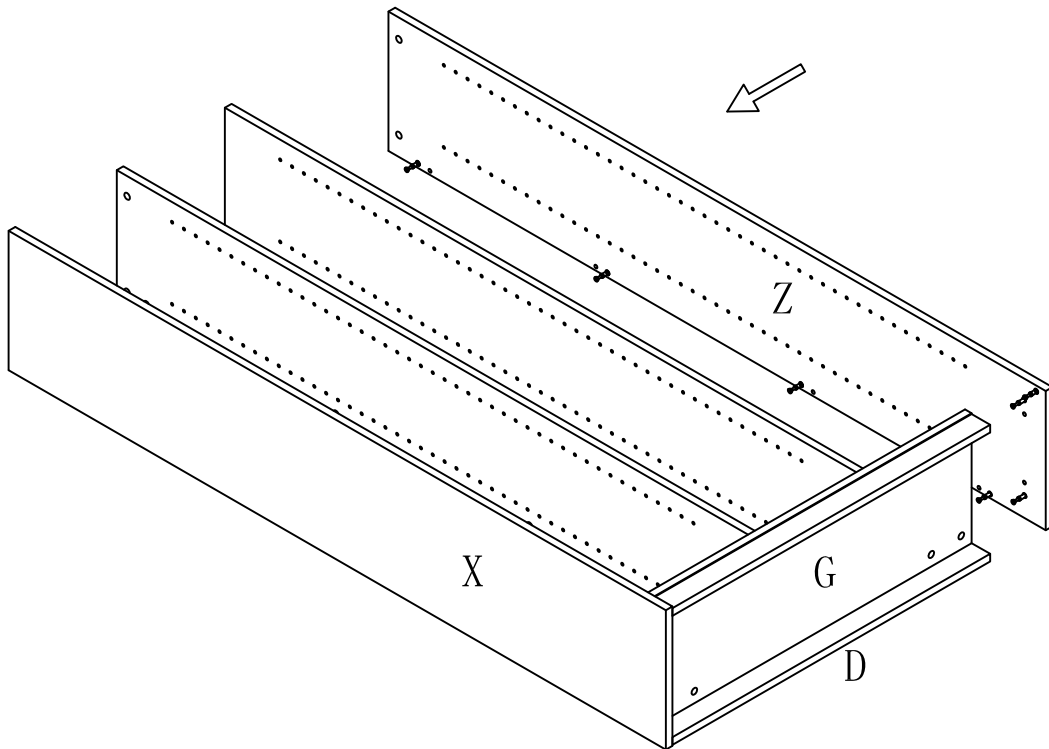

6

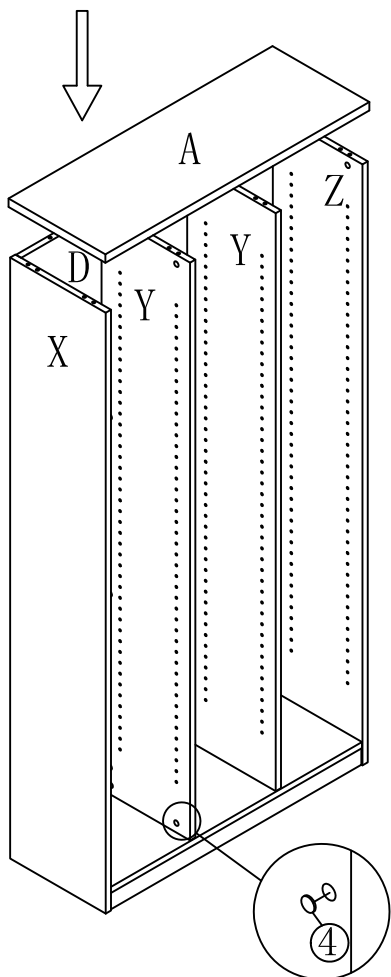

7

