

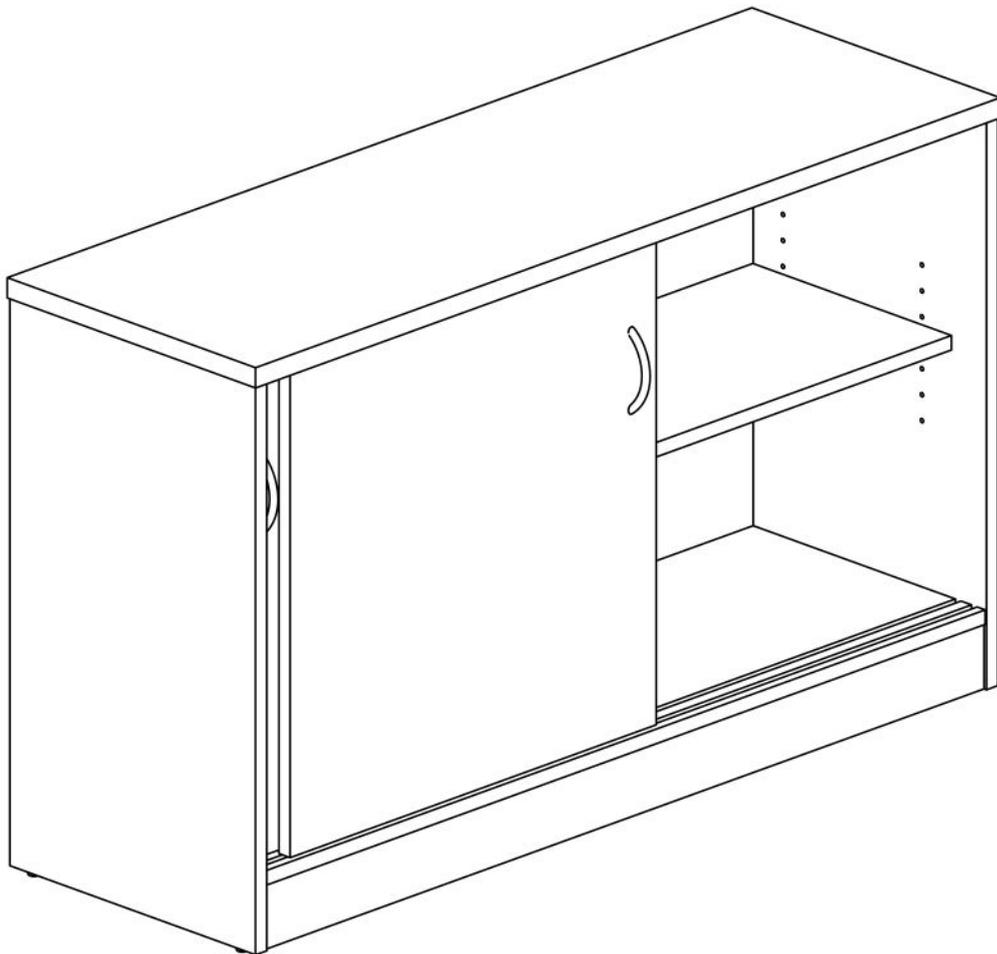
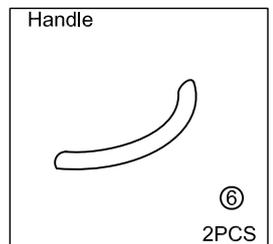
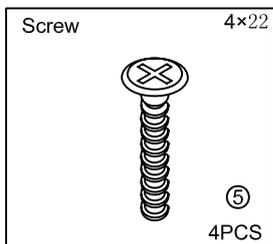
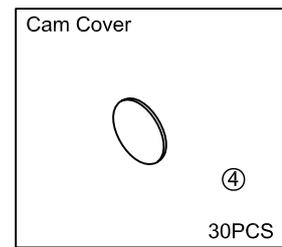
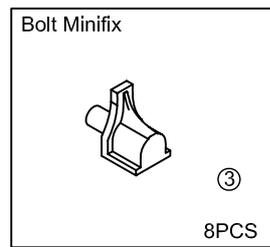
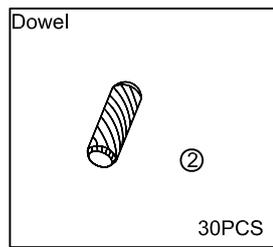
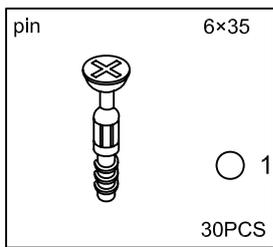
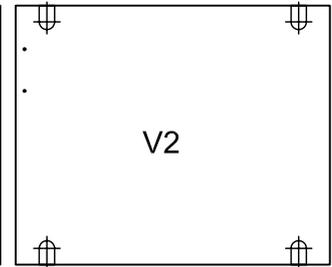
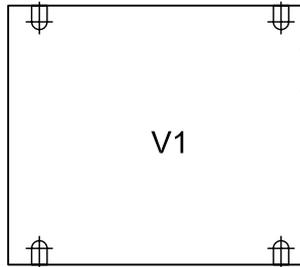
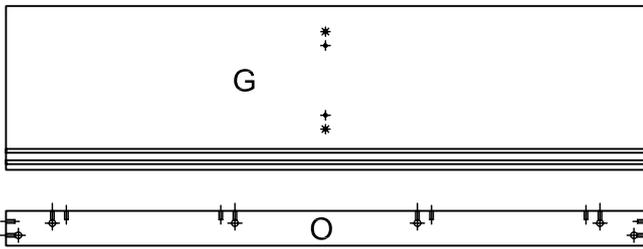
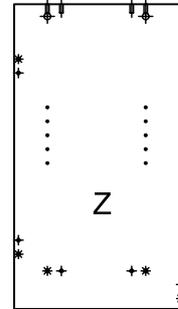
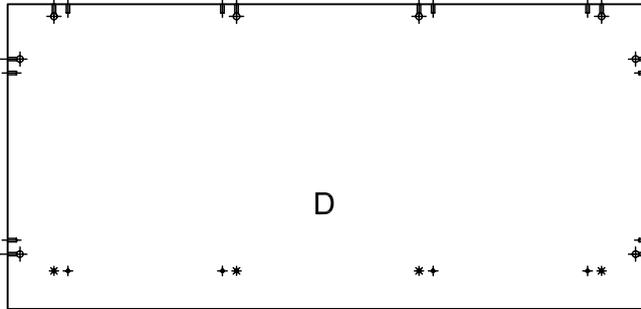
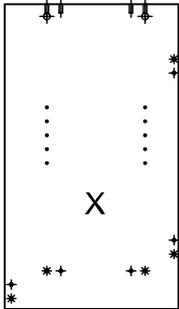
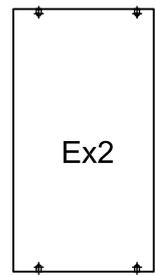



READY2GO

**ASSEMBLY INSTRUCTIONS
CREDENZA 1200W
R2O-CR12**

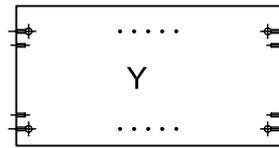


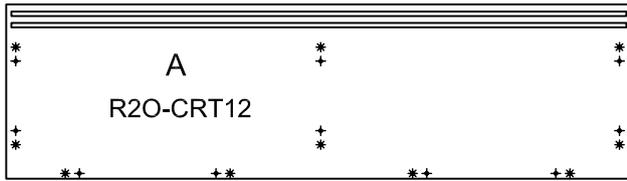


1

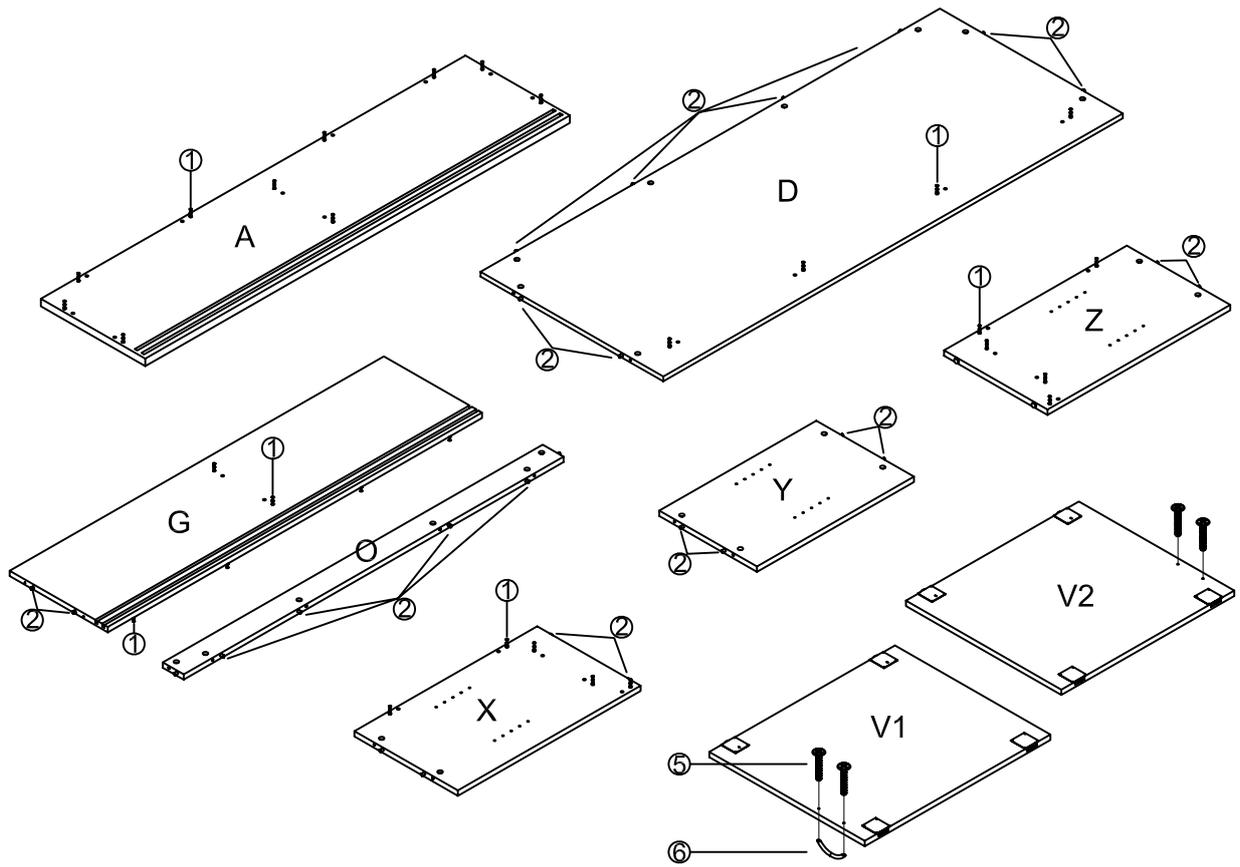


2

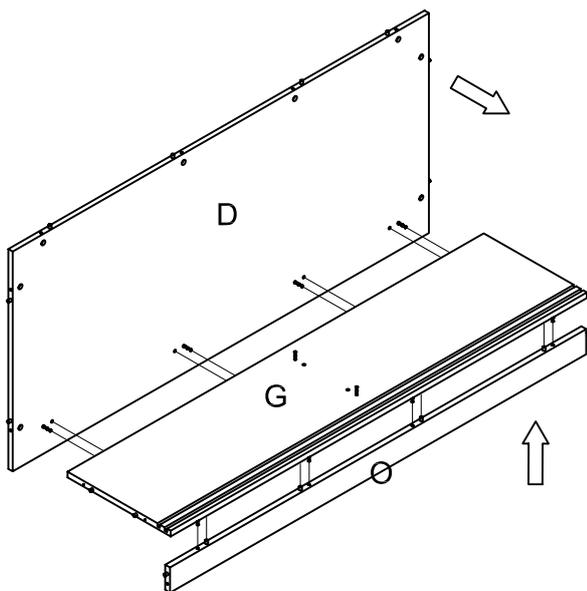

3

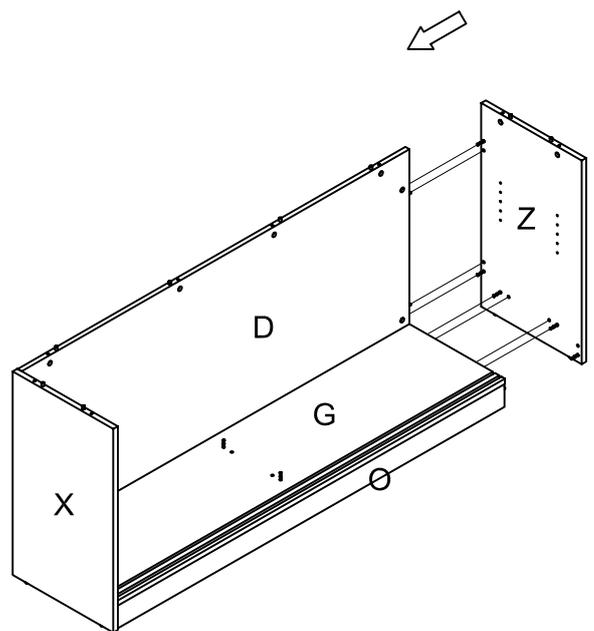


4

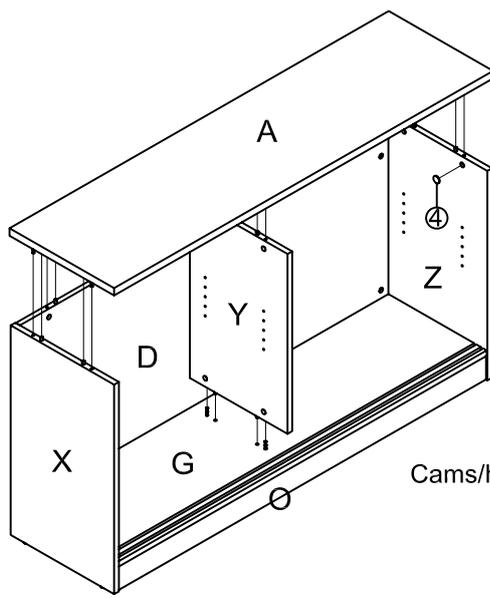


Cams/holes on the panel Y to face to panel X.

5

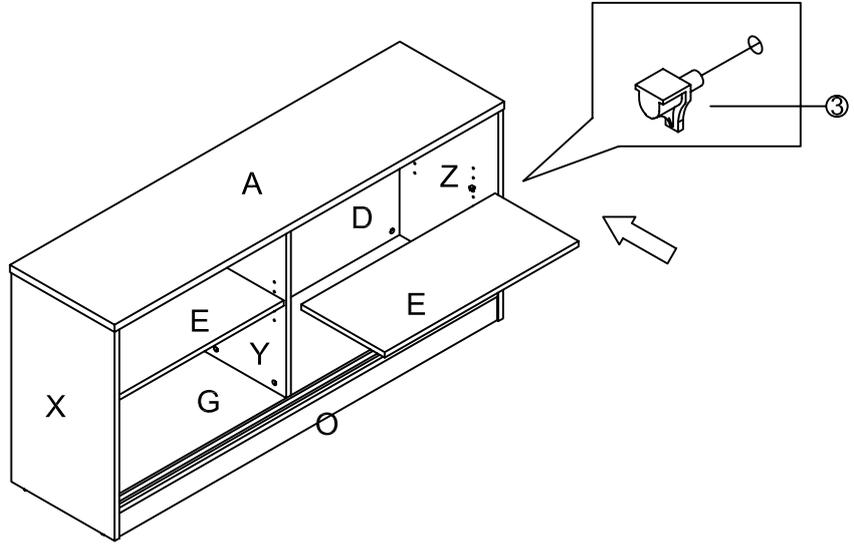
















6

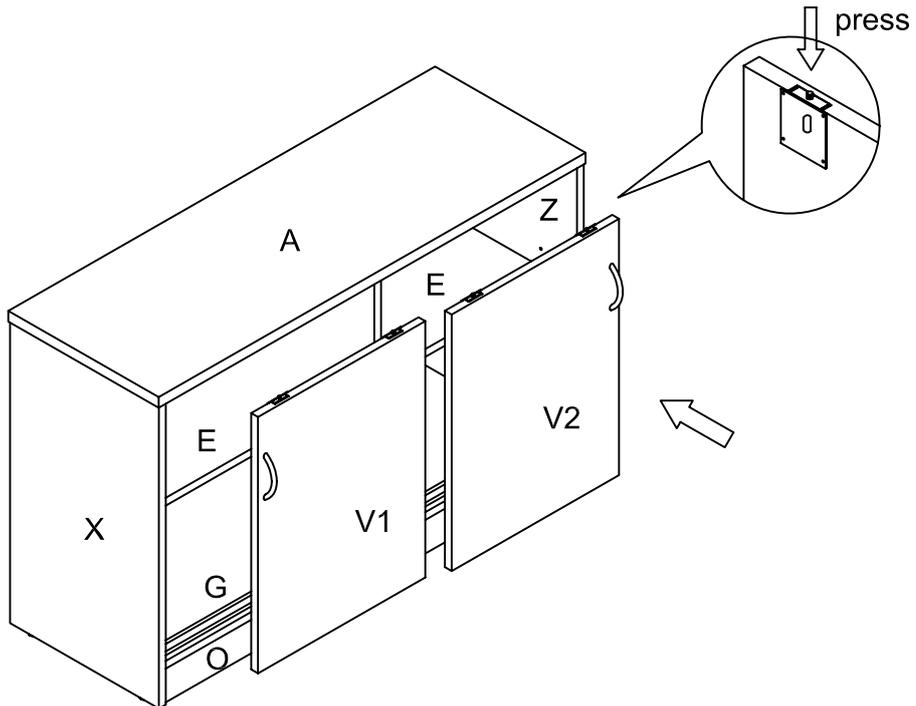


READY2GO

ASSEMBLY INSTRUCTIONS
CREDENZA 1500W
R20-CR15

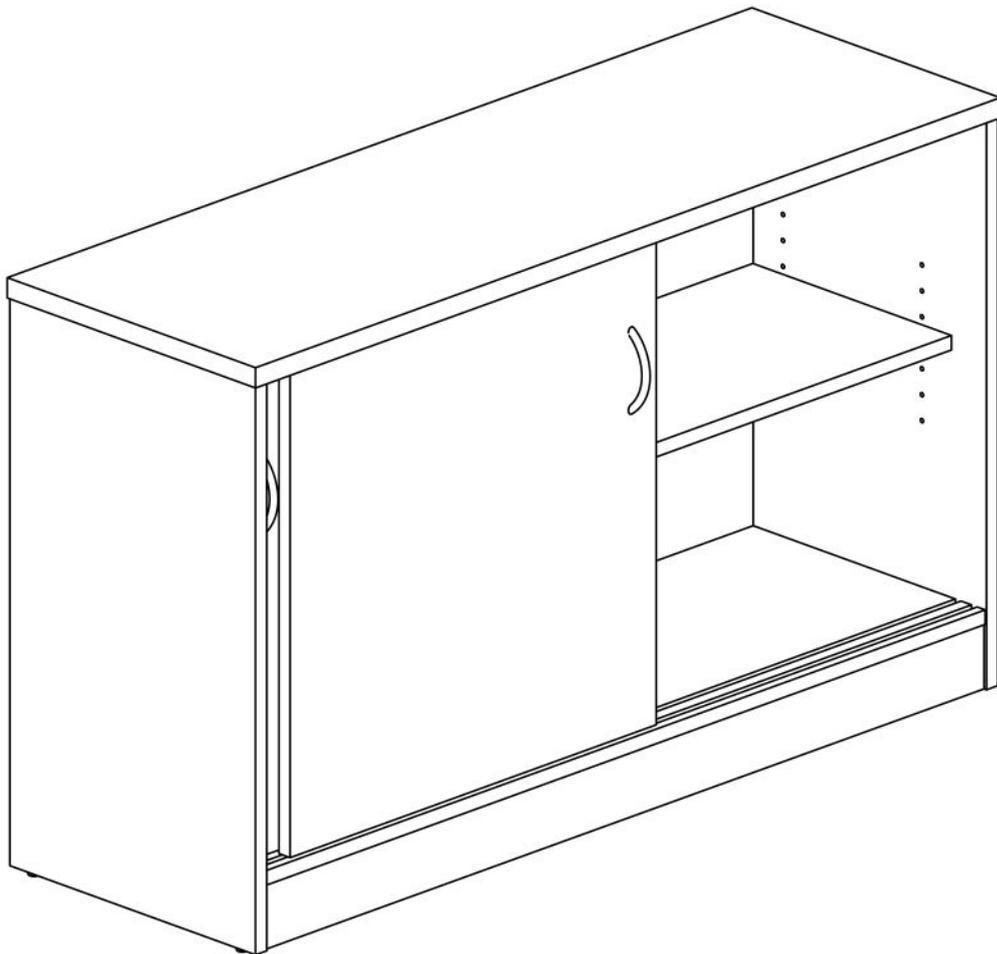


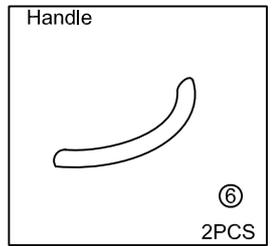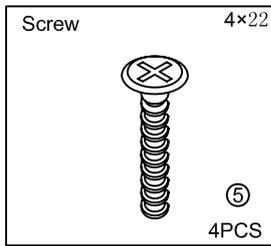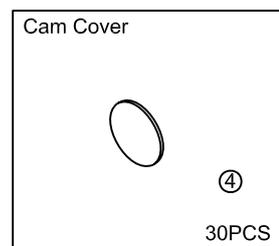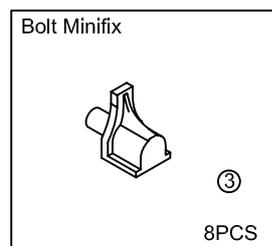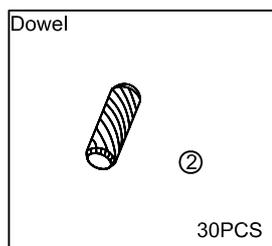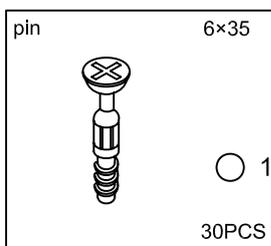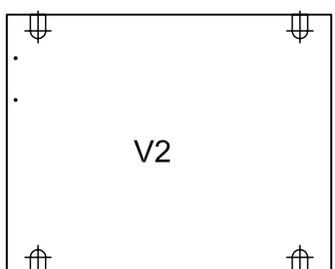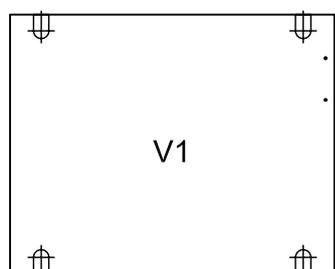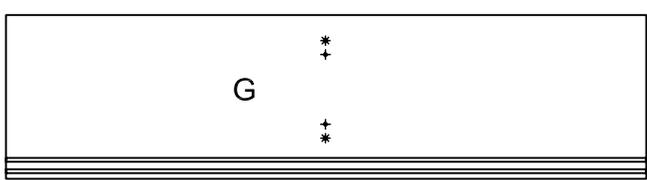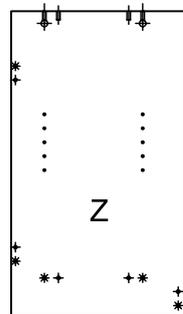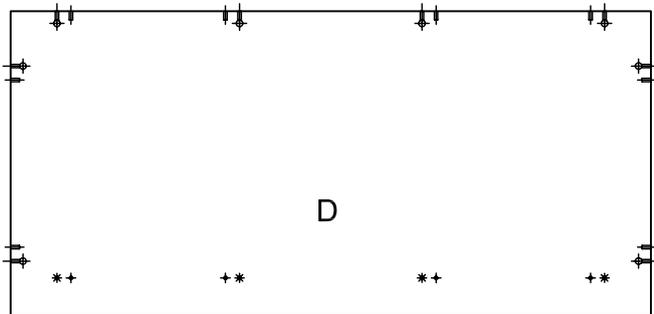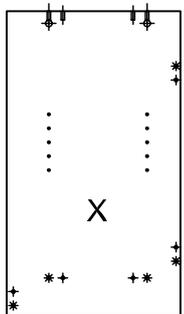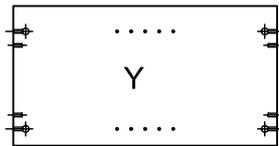


1

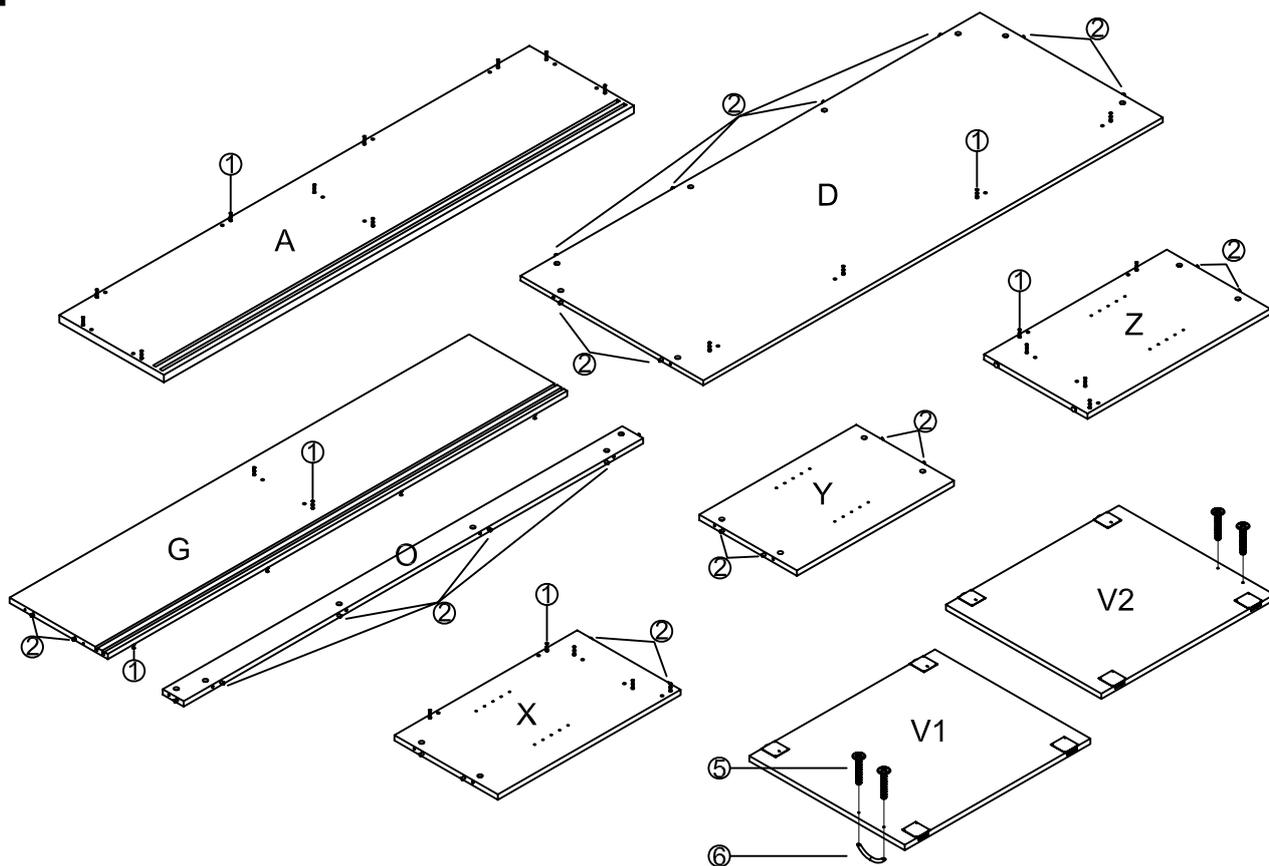


2

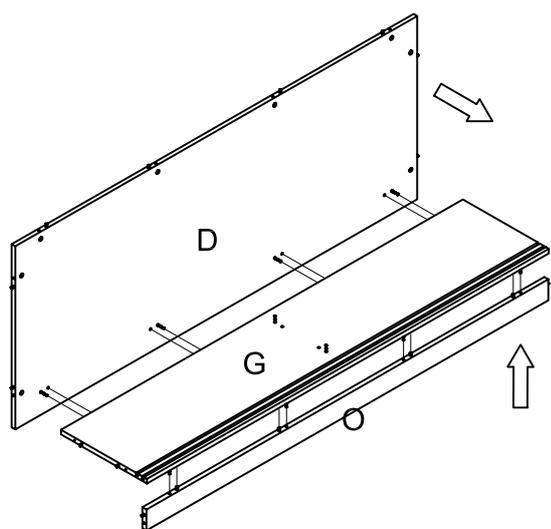

3

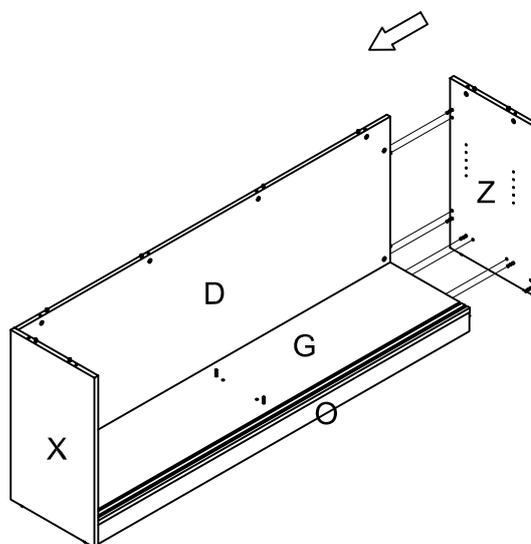


4

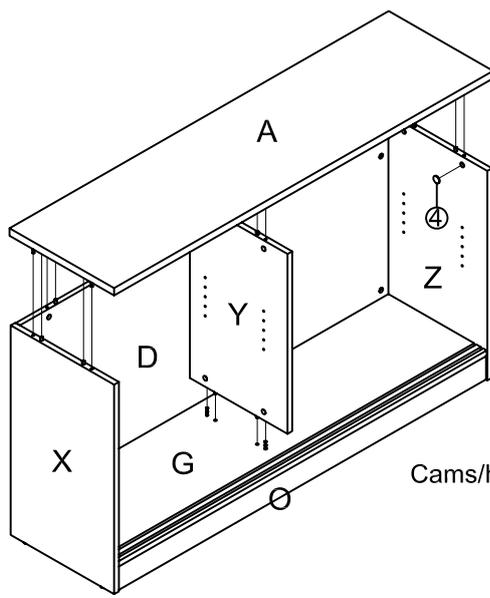


Cams/holes on the panel Y to face to panel X.

5

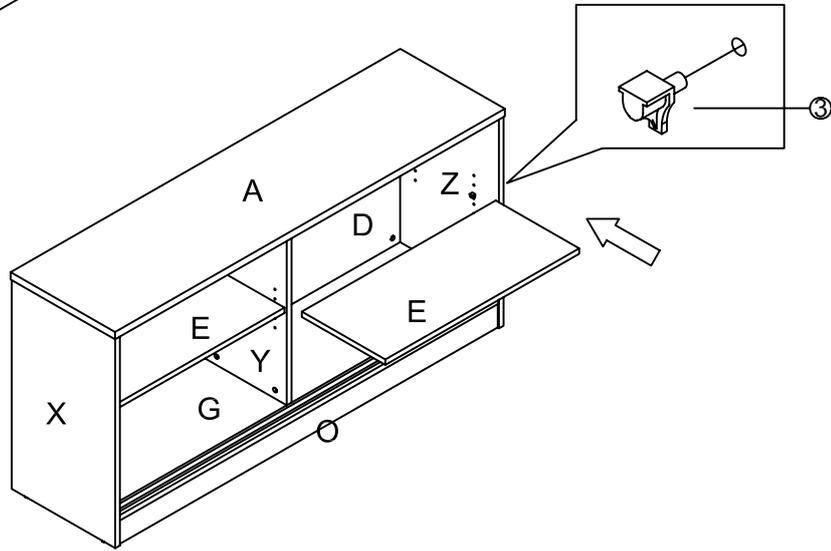

















6

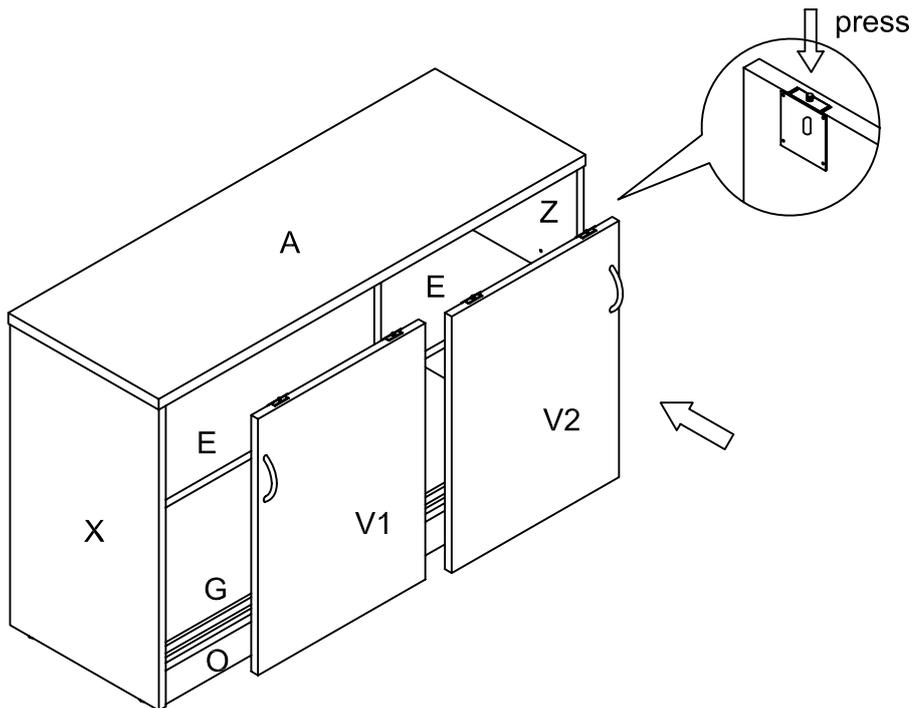


READY2GO

**ASSEMBLY INSTRUCTIONS
CREDENZA 1800W
R20-CR18**

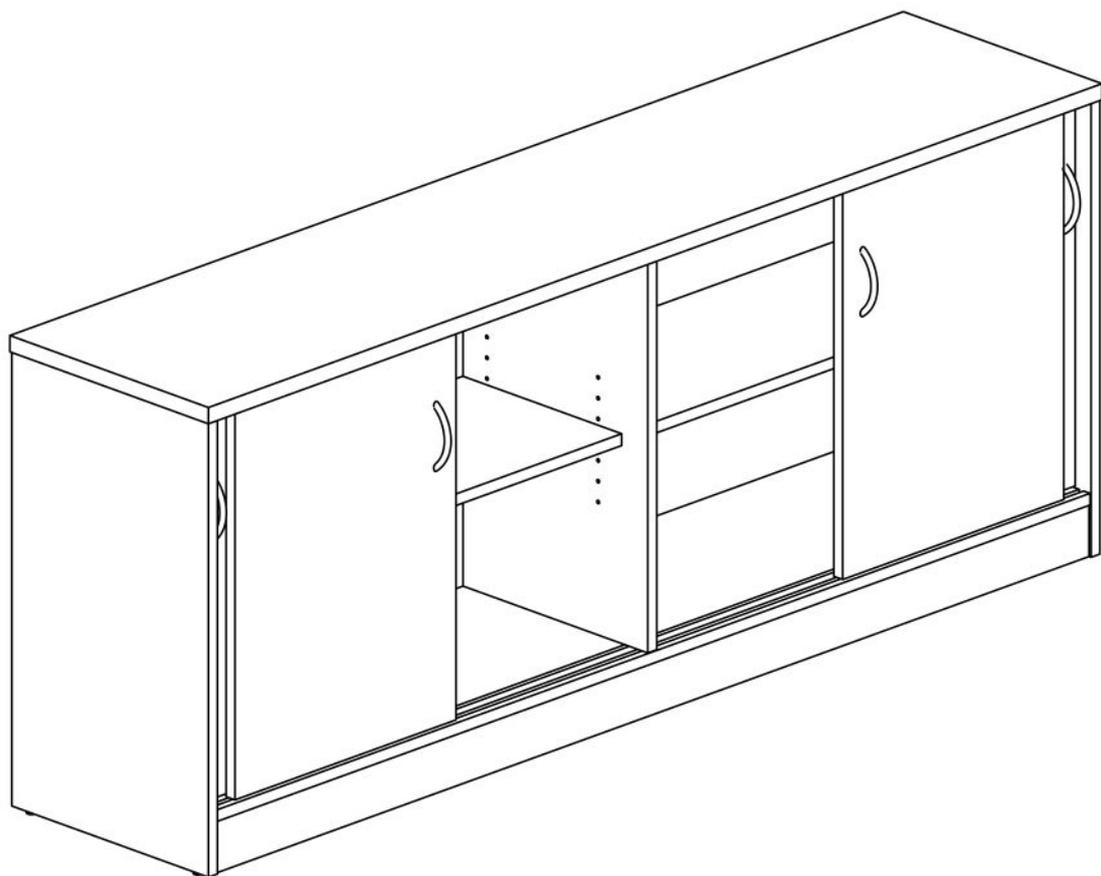


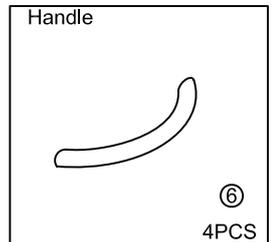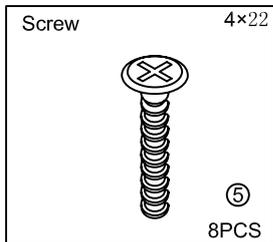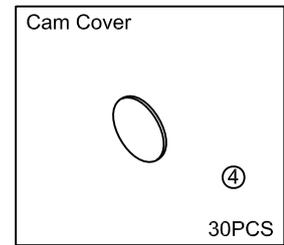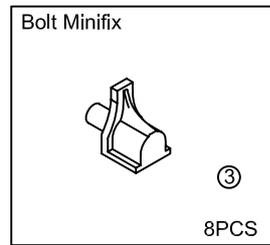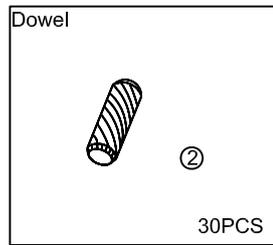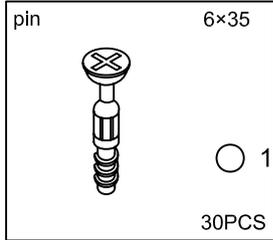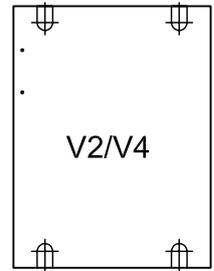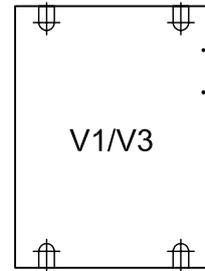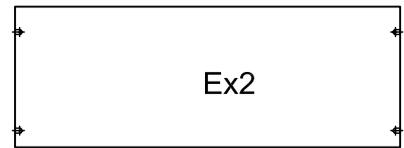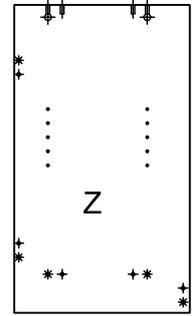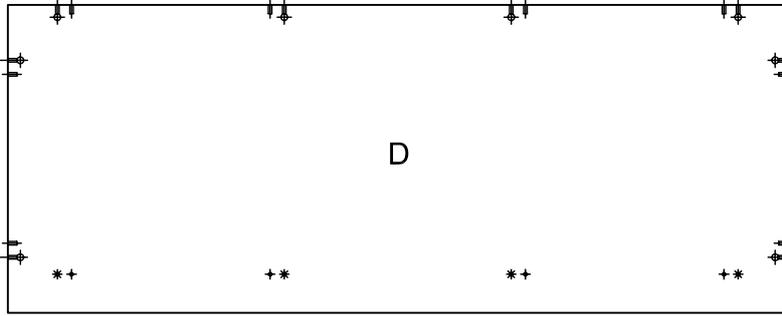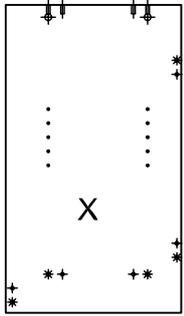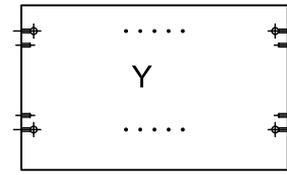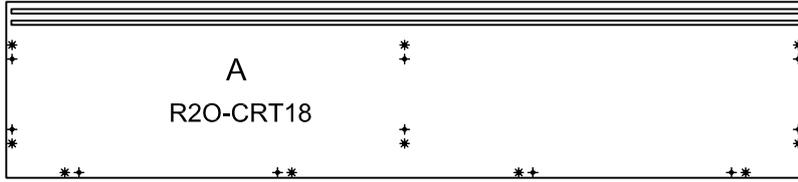


1

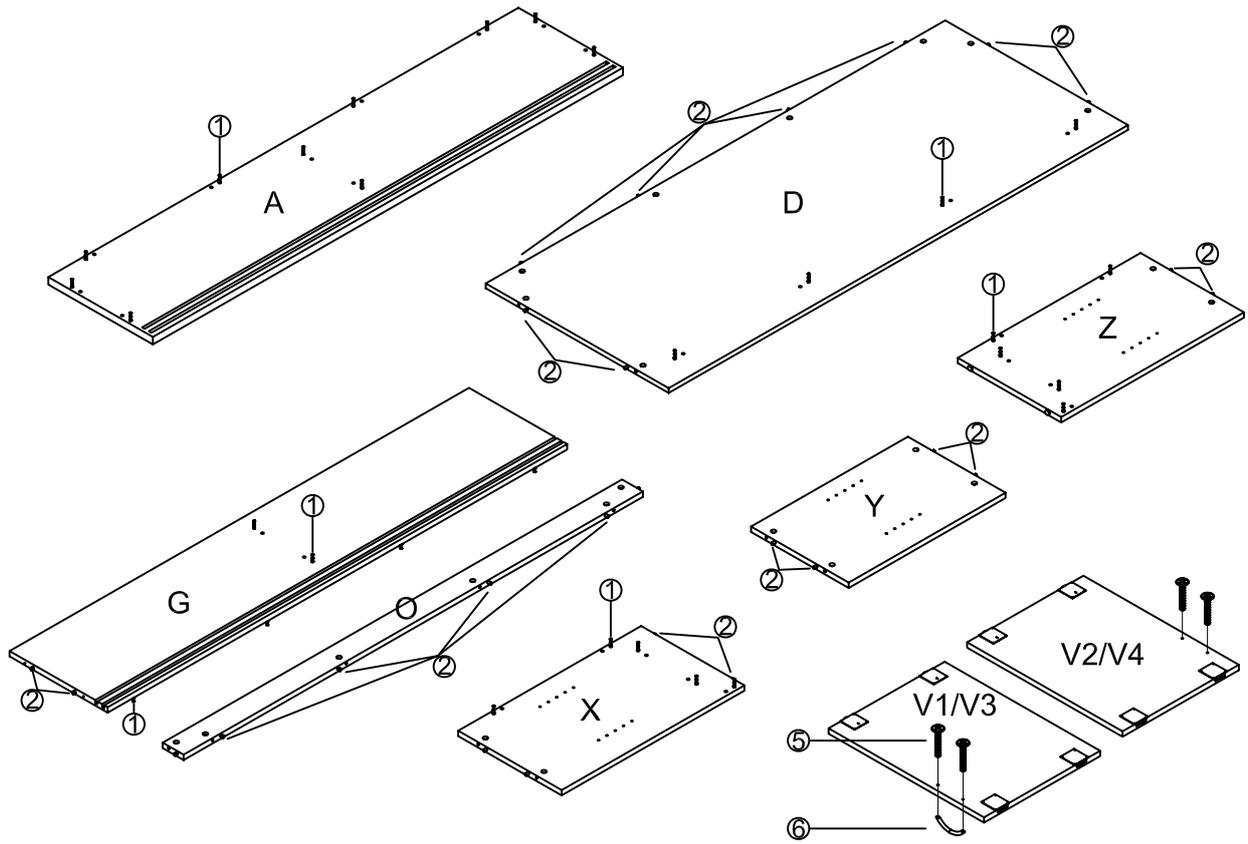


2

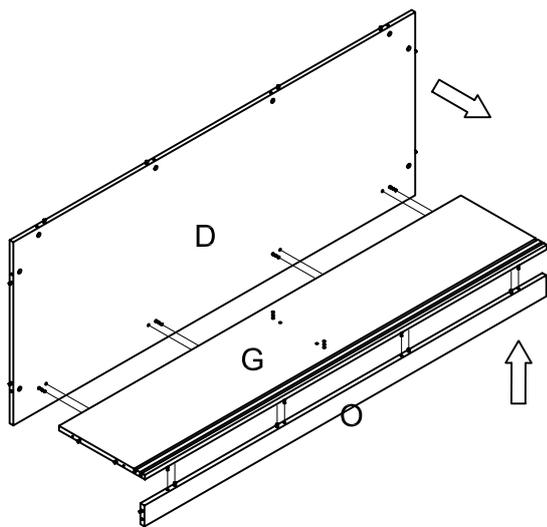

3

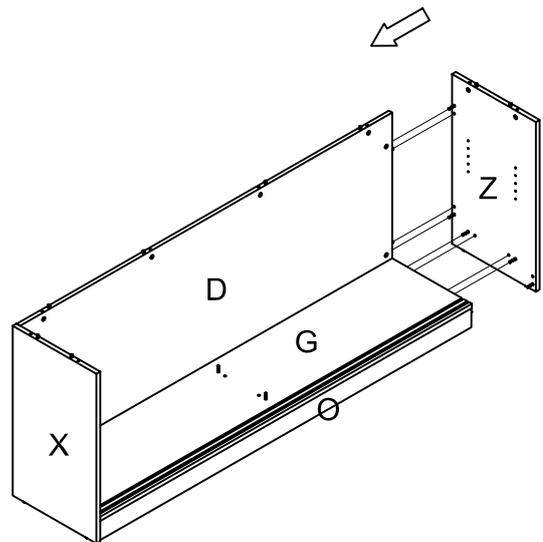


4

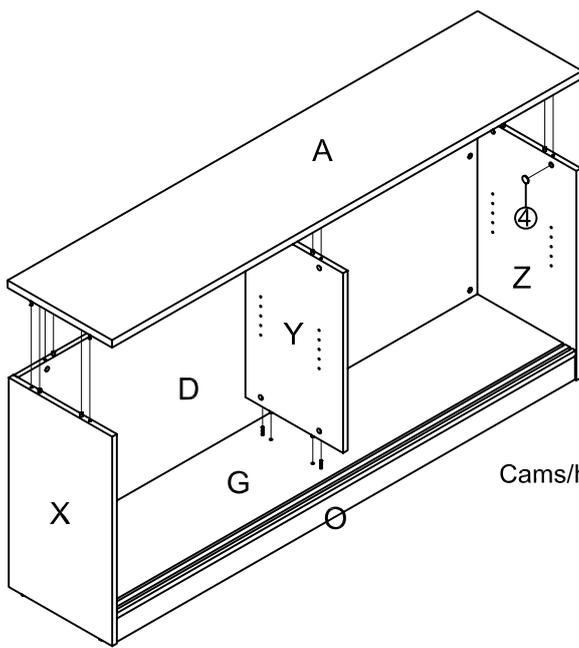

Cams/holes on the panel Y to face to panel X.

5

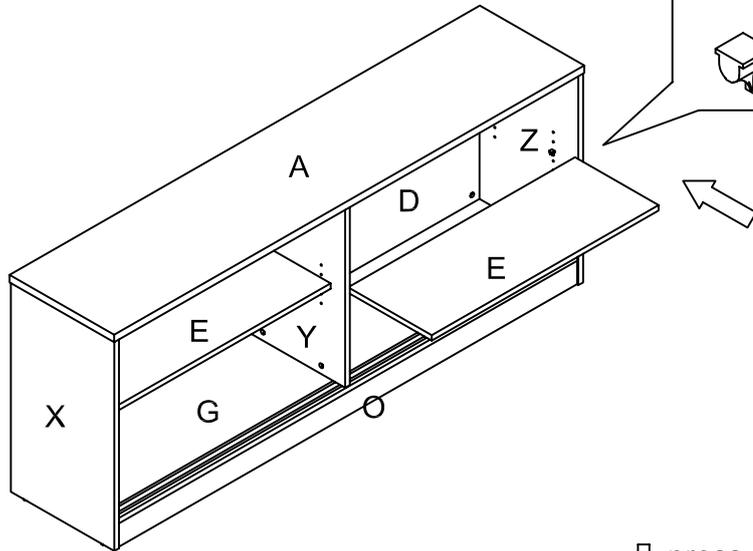

6

