


Slatted Acoustic Panel Installation


1. Before installation, you need to get these tools ready as followings:

saw, screw, pencil, rule.

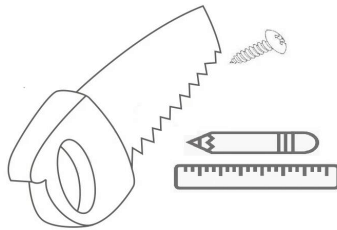


2. Choose one method you want to install, the followings are 3 options:


2.1 Use screw to lock the panel to the wall directly.

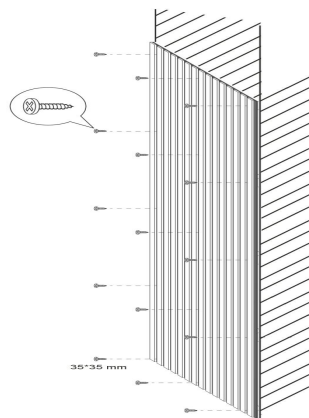

2.2 Lock the wood keel on the wall and put some acoustic cottons, then lock the panel to the wood keels.

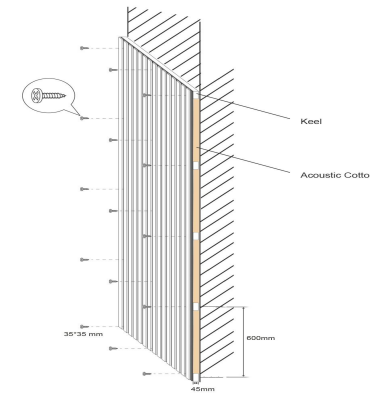

2.3 Screw the Y shape keel to the wall and back side of the panel, then hang the panel to the wall at Y shape.

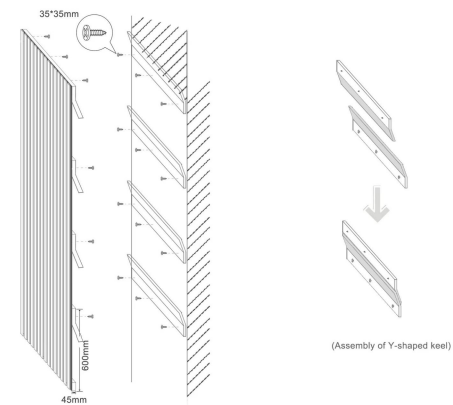

Installation with Y-Shaped Keel