



900mm Wide

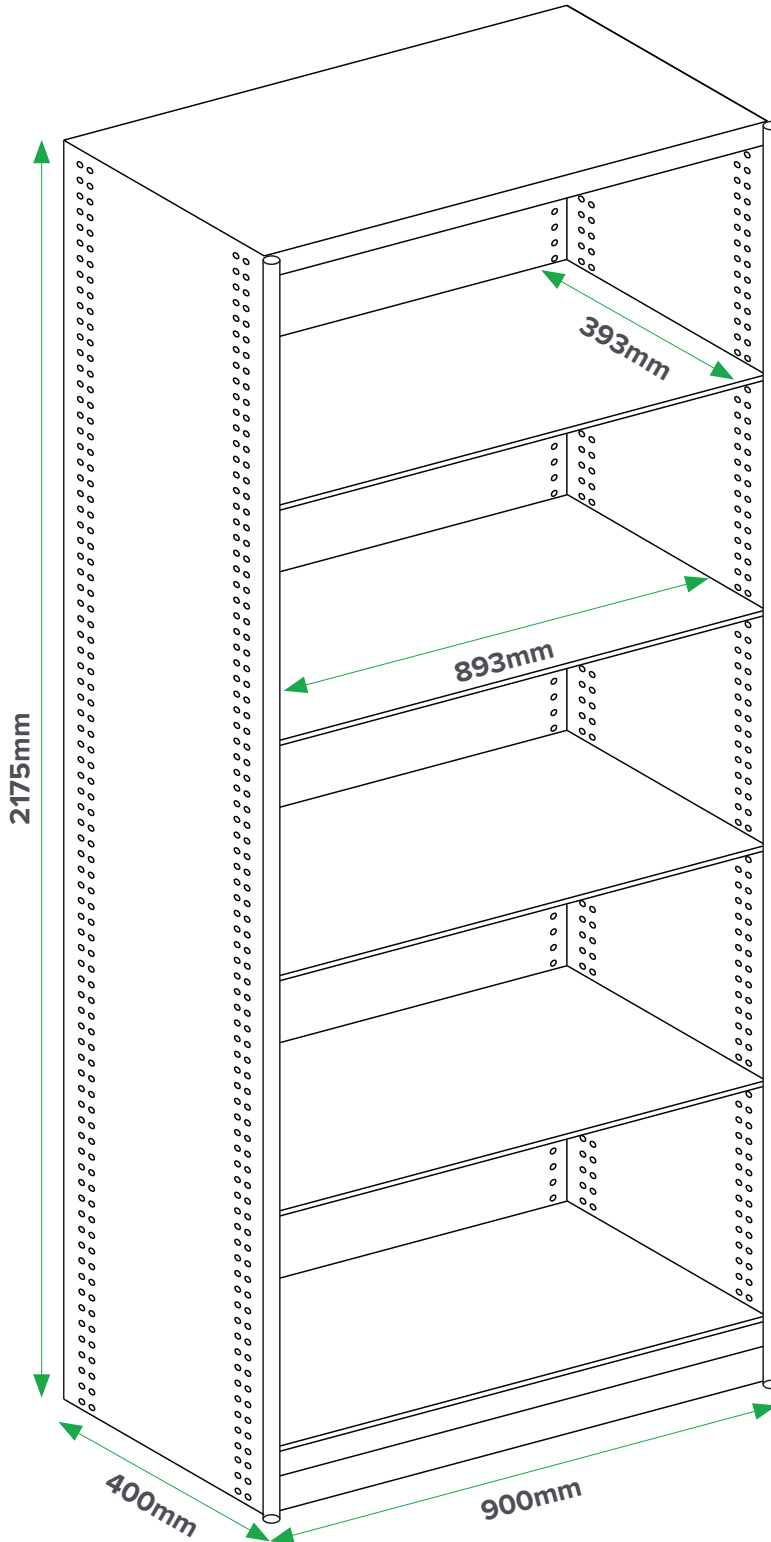

Manufacturing tolerance: $\pm 1\text{mm}$

1200mm Wide

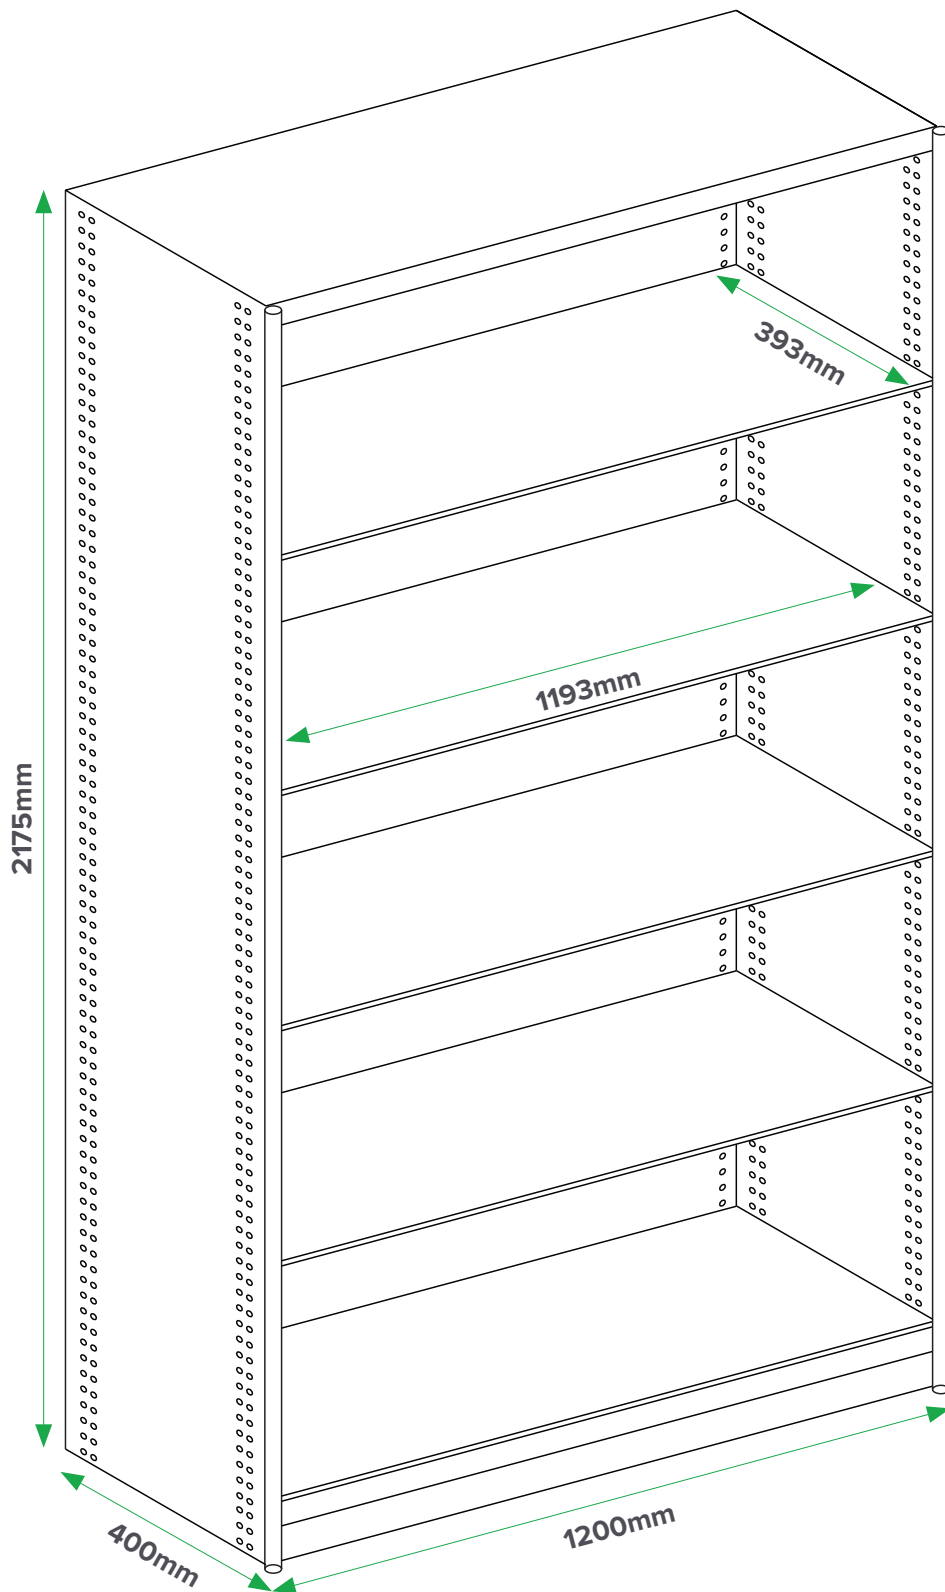

Manufacturing tolerance: $\pm 1\text{mm}$